

AIRCRAFT PARKING/  
DOCKING CHART (PDC)


JOÃO PESSOA / Presidente Castro Pinto, INTL (SBJP)

PB - BRASIL

AD ELEV: 217'

ARP S07 08 54 W034 57 01

D-ATIS NIL	CLRD NIL	GNDC NIL	TWR 118.30	APRON NIL
---------------	-------------	-------------	---------------	--------------

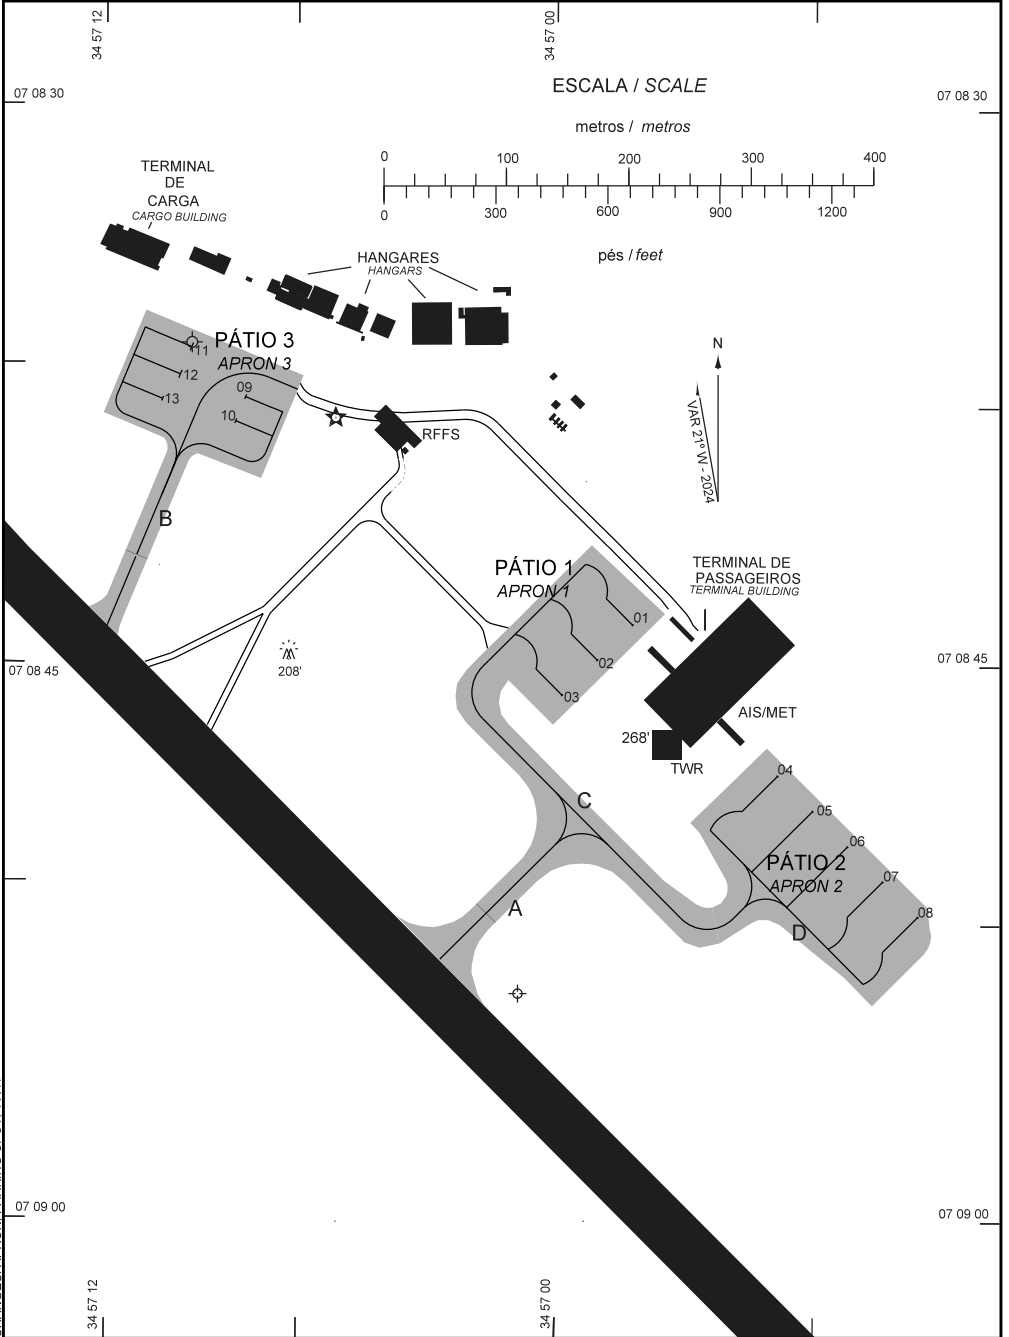

CHANGES: APRON, PARKING SPOT, TWR.

**COORDENADAS DOS PONTOS DE ESTACIONAMENTO  
PARKING SPOT COORDINATES**

PONTO SPOT	COORDENADAS COORDINATES	PONTO SPOT	COORDENADAS COORDINATES
<b>PÁTIO 1 / APRON 1</b>			
01	07 08 44.49 S 34 56 57.67 W		
02	07 08 45.31 S 34 56 58.80 W		
03	07 08 45.80 S 34 56 59.60 W		
<b>PÁTIO 2 / APRON 2</b>			
04	07 08 48.20 S 34 56 54.10 W		
05	07 08 49.14 S 34 56 53.17 W		
06	07 08 50.07 S 34 56 52.24 W		
07	07 08 51.01 S 34 56 51.31 W		
08	07 08 51.94 S 34 56 50.38 W		
<b>PÁTIO 3 / APRON 3</b>			
09	07 08 38.15 S 34 57 08.23 W		
10	07 08 38.78 S 34 57 08.49 W		
11	07 08 36.82 S 34 57 09.65 W		
12	07 08 37.54 S 34 57 09.96 W		
13	07 08 38.19 S 34 57 10.43 W		
<b>INS</b>			
	07 08 36.70 S 34 57 09.72 W		

CHANGES: APRON, PARKING SPOT, TWY.