

AIRCRAFT PARKING/
DOCKING CHART (PDC)


JOÃO PESSOA / Presidente Castro Pinto, INTL (SBJP)

PB - BRASIL

AD ELEV: 217'

ARP S07 08 54 W034 57 01

D-ATIS NIL	CLRD NIL	GNDC NIL	TWR 118.30	APRON NIL
---------------	-------------	-------------	---------------	--------------

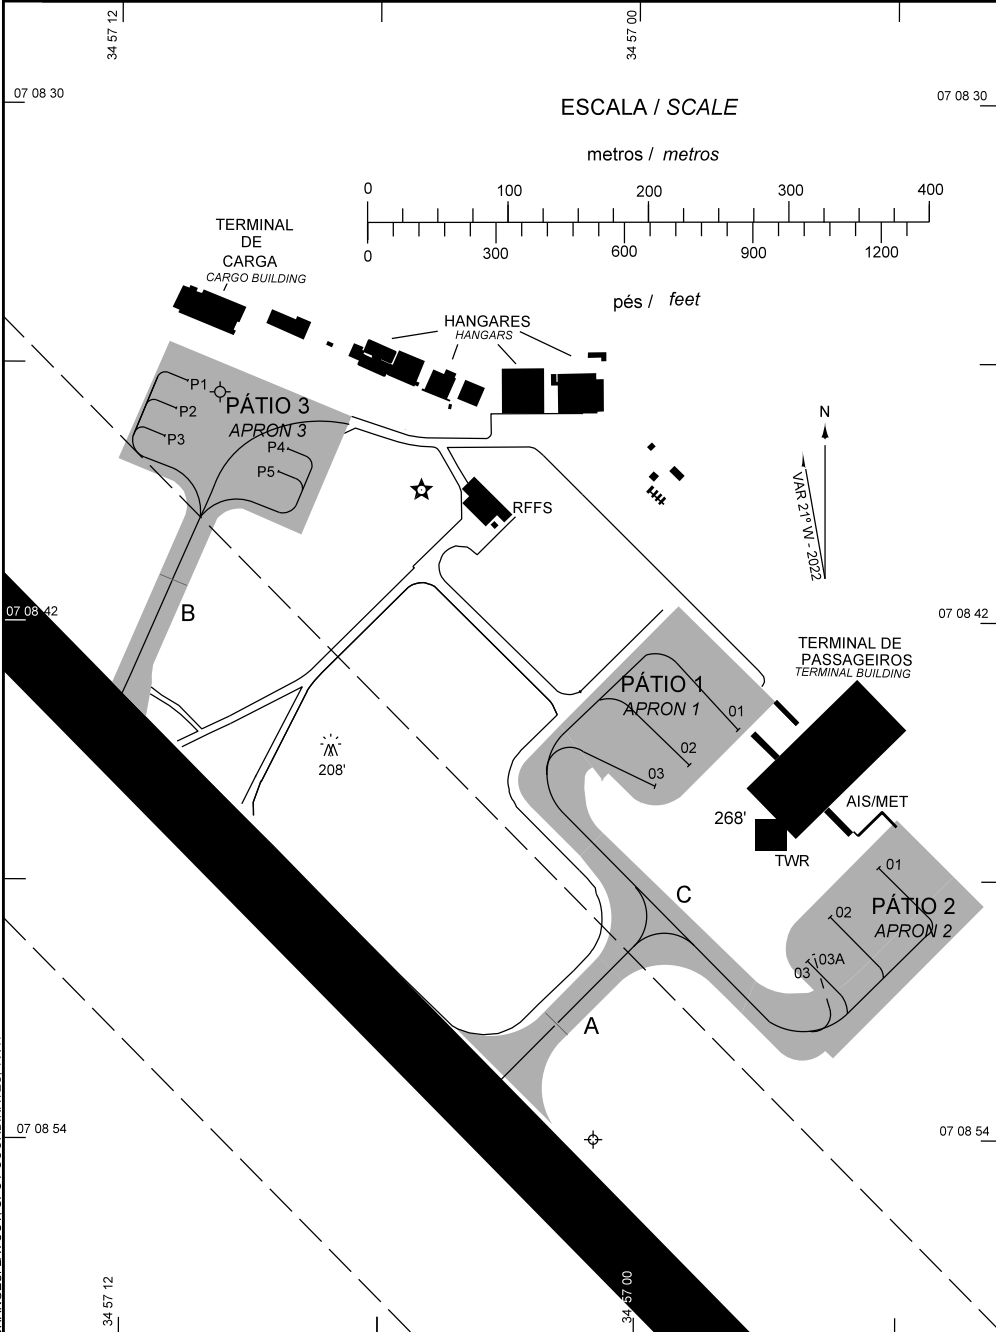

CHANGES: LAYOUT, SPOT COORDINATES, TWR

COORDENADAS DOS PONTOS DE ESTACIONAMENTO
PARKING SPOT COORDINATES

PONTO SPOT	COORDENADAS COORDINATES	PONTO SPOT	COORDENADAS COORDINATES
PÁTIO 1 / APRON 1			
01	07 08 44.49 S 34 56 57.67 W		
02	07 08 45.31 S 34 56 58.80 W		
03	07 08 45.80 S 34 56 59.60 W		
PÁTIO 2 / APRON 2			
01	07 08 47.68 S 34 56 54.40 W		
02	07 08 48.82 S 34 56 55.52 W		
03	07 08 49.84 S 34 56 56.04 W		
03A	07 08 49.69 S 34 56 55.90 W		
PÁTIO 3 / APRON 3			
P1	07 08 36.43 S 34 57 10.47 W		
P2	07 08 37.07 S 34 57 10.73 W		
P3	07 08 37.72 S 34 57 11.00 W		
P4	07 08 38.01 S 34 57 08.14 W		
P5	07 08 38.54 S 34 57 08.36 W		
INS			
	07 08 36.70 S 34 57 09.72 W		

CHANGES: LAYOUT, SPOT COORDINATES, TWY