



## CODING TABLE

IAC NDB RWY 17					BAURU/ Bauru - Arealva (SBAE)							SBAE_IAC_00H		11 JUN 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	FINAL	N/A	N/A	ARE	IF	N/A	N/A	N/A	+4000	N/A	N/A	N/A	N/A	IAF	N/A
20	FINAL	N/A	ARE	ARE	FC	28.08° Mag 7.38° True	N/A	N/A	+3200	N/A	N/A	2.00 min	N/A	OTHER	N/A
30	FINAL	N/A	ARE	ARE01*	CF	179.44° Mag 158.74° True	L	N/A	@1977	N/A	N/A	N/A	N/A	FTP	N/A
10	MA	N/A	ARE	N/A	VA	179.44° Mag 158.74° True	N/A	N/A	+3000	230	-	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	ARE	DF	N/A	L	N/A	+4000	230	-	N/A	N/A	MAHF	N/A
30	MA	N/A	ARE	ARE	HM	28.08° Mag 7.38° True	R	N/A	+4000	N/A	N/A	1.00 min	N/A	MAHF	N/A

\*Fictitious point only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
NDB ARE	S 22:10:07.76W 49:04:10.83
ARE01	S 22:09:11.61W 49:04:34.28

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT