



## CODING TABLE

IAC RNP RWY 05					ARAÇATUBA / Araçatuba (SBAU)							SBAU_IAC_00C		06 AUG 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	AU004	IF	N/A	N/A	N/A	+5000	N/A	N/A	N/A	N/A	IAF	RNP APCH
20	APCH	N	N/A	AU002	TF	49.39° Mag 28.67° True	N/A	N/A	+3500	N/A	N/A	6.00	N/A	IF	RNP APCH
10	APCH	N/A	N/A	AU003	IF	N/A	N/A	N/A	+5000	N/A	N/A	N/A	N/A	IAF	RNP APCH
20	APCH	N	N/A	AU002	TF	119.34° Mag 98.62° True	N/A	N/A	+3500	N/A	N/A	6.00	N/A	IF	RNP APCH
10	APCH	N/A	N/A	AU006	IF	N/A	N/A	N/A	+5000	N/A	N/A	N/A	N/A	IAF	RNP APCH
20	APCH	N	N/A	AU002	TF	339.39° Mag 318.61° True	N/A	N/A	+3500	N/A	N/A	6.00	N/A	IF	RNP APCH
10	FINAL	N/A	N/A	AU002	IF	N/A	N/A	N/A	+3500	N/A	N/A	N/A	N/A	IF	RNP APCH
20	FINAL	N	N/A	AU001	TF	49.47° Mag 28.71° True	N/A	N/A	R3010	N/A	N/A	5.00	N/A	FAF	RNP APCH
30	FINAL	N	N/A	AU014*	TF	49.42° Mag 28.62° True	N/A	N/A	R2140	N/A	N/A	2.70	-3.00	SDF	RNP APCH
40	FINAL	Y	N/A	RWY05	TF	49.43° Mag 28.61° True	N/A	N/A	@1412	N/A	N/A	2.30	-3.00	LTP	RNP APCH
10	MA	N/A	N/A	N/A	CA	49.43° Mag 28.61° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	RNP APCH
20	MA	Y	N/A	AU003	DF	N/A	L	N/A	+5000	N/A	N/A	N/A	N/A	MAHF	RNP APCH
30	MA	Y	N/A	AU003	HM	119.34° Mag 98.62° True	L	N/A	+5000	N/A	N/A	1.00 min	N/A	MAHF	RNP APCH

\*Fictitious point only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
AU002	S 21:17:48.00W 50:30:54.00
AU001	S 21:13:24.00W 50:28:19.80
RWY05	S 21:08:58.45W 50:25:45.35
AU004	S 21:23:04.80W 50:33:58.80
AU003	S 21:16:54.00W 50:37:15.00
AU006	S 21:22:19.20W 50:26:39.00
AU014	S 21:11:01.19W 50:26:56.71

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT