



## CODING TABLE

STAR RNAV ENSIG 1A RWY 16					BELO HORIZONTE / Tancredo Neves, INTL (SBCF)							SBCF_STAR_01J		05 OCT 23	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	VULAD	N/A	N/A	VULAD	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	VULAD	N	N/A	ENSIG	TF	108.98° Mag / 86.42° True	N/A	N/A	N/A	N/A	N/A	73.76	N/A	OTHER	RNAV 1 or RNP 1
10	REINA	N/A	N/A	REINA	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	REINA	N	N/A	ENSIG	TF	150.15° Mag / 127.44° True	N/A	N/A	N/A	N/A	N/A	63.36	N/A	OTHER	RNAV 1 or RNP 1
10	GEVMI	N/A	N/A	GEVMI	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	GEVMI	N	N/A	EKINU	TF	208.19° Mag / 185.26° True	N/A	N/A	N/A	N/A	N/A	104.15	N/A	OTHER	RNAV 1 or RNP 1
30	GEVMI	N	N/A	ENSIG	TF	179.91° Mag / 157.02° True	N/A	N/A	N/A	N/A	N/A	31.94	N/A	OTHER	RNAV 1 or RNP 1
10	RWY	N/A	N/A	ENSIG	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	RWY	N	N/A	CF009	TF	150.08° Mag / 127.15° True	N/A	-16000	N/A	N/A	N/A	13.85	N/A	OTHER	RNAV 1 or RNP 1
30	RWY	N	N/A	CF008	TF	150.06° Mag / 127.08° True	N/A	N/A	+10000	N/A	N/A	10.02	N/A	OTHER	RNAV 1 or RNP 1
40	RWY	N	N/A	CF007	TF	132.15° Mag / 109.13° True	N/A	-9000	N/A	N/A	N/A	5.25	N/A	OTHER	RNAV 1 or RNP 1
50	RWY	N	N/A	CF006	TF	132.14° Mag / 109.10° True	N/A	N/A	N/A	N/A	N/A	3.02	N/A	OTHER	RNAV 1 or RNP 1
60	RWY	N	N/A	OSOMI	TF	162.89° Mag / 139.84° True	N/A	N/A	+7000	210	-	5.33	N/A	IAF	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
REINA	S 18:26:16.80W 45:34:16.80
ENSIG	S 19:04:49.23W 44:41:09.71
GEVMI	S 16:51:10.80W 44:44:16.80
EKINU	S 18:35:18.33W 44:54:19.63
CF009	S 19:13:12.67W 44:29:29.63
CF008	S 19:19:16.40W 44:21:02.41
CF007	S 19:20:59.87W 44:15:47.93
CF006	S 19:21:59.29W 44:12:47.07
OSOMI	S 19:26:04.45W 44:09:08.98
VULAD	S 19:09:43.29W 45:58:53.33

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT