



## CODING TABLE

IAC VOR RWY 09					ALCÂNTARA / Centro de Lançamento de Alcântara, MIL (SNCW)							SNCW_IAC_00F		02 OCT 25	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	ALR	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	ALR	ALR	FC	305.19° Mag 284.34° True	N/A	N/A	+1800	N/A	N/A	7.00	N/A	N/A	N/A
30	APCH	N/A	ALR	SILUT	CF	90.00° Mag 69.15° True	L	N/A	R1790	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	N/A	SILUT	IF	N/A	N/A	N/A	R1790	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	ALR	ALR01*	CF	90.00° Mag 69.15° True	N/A	N/A	@194	N/A	N/A	5.00	-3.00	LTP	N/A
10	MA	N/A	N/A	N/A	VA	90.00° Mag 69.15° True	N/A	N/A	+1500	N/A	N/A	N/A	N/A	N/A	N/A
20	MA	N/A	N/A	ALR	DF	N/A	R	N/A	+3000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	N/A	ALR	ALR	HM	305.19° Mag 284.34° True	L	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

\*Fictitious point: Only for coding purpose.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR/DME ALR	S 02:22:17.35W 44:23:49.55
SILUT	S 02:24:19.54W 44:29:08.54
ALR01	S 02:22:32.25W 44:24:28.45

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT