



CODING TABLE

IAC VOR RWY 27					ALCÂNTARA / Centro de Lançamento de Alcântara, MIL (SNCW)							SNCW_IAC_00G		09 JUL 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	FINAL	N/A	N/A	ALR	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	FINAL	N/A	ALR	ALR	FC	131.40° Mag 110.55° True	N/A	N/A	+1800	N/A	N/A	2.00 min	N/A	OTHER	N/A
30	FINAL	N/A	ALR	ALR02*	CF	276.70° Mag 255.85° True	L	N/A	@191	N/A	N/A	N/A	N/A	FTP	N/A
10	MA	N/A	ALR	N/A	VA	277.00° Mag 256.15° True	N/A	N/A	+1500	N/A	N/A	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	ALR	DF	N/A	R	N/A	+3000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	N/A	ALR	ALR	HM	131.40° Mag 110.55° True	R	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

*Fictitious point: Only for coding purpose.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR/DME ALR	S 02:22:17.35W 44:23:49.55
ALR02	S 02:22:07.01W 44:23:07.87

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT