



## CODING TABLE

SID RNAV DALIV 1A RWY 10					CRUZEIRO DO SUL / Cruzeiro do Sul, INTL (SBCZ)							SBCZ_SID_00B		14 MAY 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	DALIV	Y	N/A	CZ016	CF	99.58° Mag/ 91.81° True	N/A	N/A	N/A	N/A	N/A	3.00	N/A	OTHER	RNAV 1 or RNP 1
20	DALIV	N	N/A	DALIV	TF	66.17° Mag/ 58.38° True	L	N/A	N/A	N/A	N/A	49.10	N/A	OTHER	RNAV 1 or RNP 1
SID RNAV NEPIN 1A RWY 10					CRUZEIRO DO SUL / Cruzeiro do Sul, INTL (SBCZ)							SBCZ_SID_00B		14 MAY 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	NEPIN	Y	N/A	CZ016	CF	99.58° Mag/ 91.81° True	N/A	N/A	N/A	N/A	N/A	3.00	N/A	OTHER	RNAV 1 or RNP 1
20	NEPIN	N	N/A	NEPIN	TF	123.91° Mag/ 116.17° True	R	N/A	N/A	N/A	N/A	56.61	N/A	OTHER	RNAV 1 or RNP 1
SID RNAV SIGOB 1A RWY 10					CRUZEIRO DO SUL / Cruzeiro do Sul, INTL (SBCZ)							SBCZ_SID_00B		14 MAY 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	SIGOB	Y	N/A	CZ016	CF	99.58° Mag/ 91.81° True	N/A	N/A	N/A	N/A	N/A	3.00	N/A	OTHER	RNAV 1 or RNP 1
20	SIGOB	N	N/A	SIGOB	TF	222.51° Mag/ 214.75° True	R	N/A	N/A	N/A	N/A	64.00	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
CZ016	S 07:36:11.40W 72:42:30.00
DALIV	S 07:11:07.20W 71:59:56.40
NEPIN	S 08:02:11.02W 71:51:45.81
SIGOB	S 08:28:16.20W 73:20:18.00

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
10	S 07:36:02.08 W 72:45:31.25	636.48

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT