



CODING TABLE

SID RNAV VUNGA 1A RWY 11					MANAUS / Eduardo Gomes, INTL (SBEG)							SBEG_SID_02L		07 AUG 25	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	N/A	N/A	N/A	VA	106.88° Mag / 90.12° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	RNP 1 or RNAV 1
20	RWY	N	N/A	EG002	DF	N/A	R	N/A	+8000	N/A	N/A	N/A	N/A	OTHER	RNP 1 or RNAV 1
30	RWY	N	N/A	VUNGA	TF	282.21° Mag / 265.51° True	N/A	N/A	+10000	N/A	N/A	10.09	N/A	OTHER	RNP 1 or RNAV 1
10	VUNEP	N/A	N/A	VUNGA	IF	N/A	N/A	N/A	+10000	N/A	N/A	N/A	N/A	OTHER	RNP 1 or RNAV 1
20	VUNEP	N	N/A	EG021	TF	282.14° Mag / 265.52° True	N/A	N/A	N/A	N/A	N/A	13.17	N/A	OTHER	RNP 1 or RNAV 1
30	VUNEP	N	N/A	VUNEP	TF	286.00° Mag / 269.50° True	N/A	N/A	N/A	N/A	N/A	96.69	N/A	OTHER	RNP 1 or RNAV 1
10	UPOMI	N/A	N/A	VUNGA	IF	N/A	N/A	N/A	+10000	N/A	N/A	N/A	N/A	OTHER	RNP 1 or RNAV 1
20	UPOMI	N	N/A	EG004	TF	221.99° Mag / 205.37° True	N/A	N/A	N/A	N/A	N/A	87.84	N/A	OTHER	RNP 1 or RNAV 1
30	UPOMI	N	N/A	UPOMI	TF	238.41° Mag / 222.12° True	N/A	N/A	N/A	N/A	N/A	51.23	N/A	OTHER	RNP 1 or RNAV 1
10	UKBEL	N/A	N/A	VUNGA	IF	N/A	N/A	N/A	+10000	N/A	N/A	N/A	N/A	OTHER	RNP 1 or RNAV 1
20	UKBEL	N	N/A	EG021	TF	282.14° Mag / 265.52° True	N/A	N/A	N/A	N/A	N/A	13.17	N/A	OTHER	RNP 1 or RNAV 1
30	UKBEL	N	N/A	EG006	TF	245.49° Mag / 228.98° True	N/A	N/A	N/A	N/A	N/A	65.86	N/A	OTHER	RNP 1 or RNAV 1
40	UKBEL	N	N/A	UKBEL	TF	238.55° Mag / 222.49° True	N/A	N/A	N/A	N/A	N/A	98.13	N/A	OTHER	RNP 1 or RNAV 1

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
11	S 03:02:19.02 W 60:02:15.23	256.29

IDENT	Latitude / Longitude (WGS84) DD:MM:SS.SS
EG002	S 03:09:20.66W 60:08:17.84
VUNGA	S 03:10:08.28W 60:18:21.33
EG004	S 04:29:52.76W 60:56:02.08
UPOMI	S 05:08:03.00W 61:30:28.00
EG021	S 03:11:10.21W 60:31:29.19
EG006	S 03:54:34.95W 61:21:11.91
UKBEL	S 05:07:15.00W 62:27:37.20
VUNEP	S 03:11:57.00W 62:08:09.00

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT