



## CODING TABLE

SID RNAV MUNUG 1A RWY 18					RECIFE / Guarapes - Gilberto Freyre, INTL (SBRF)							SBRF_SID_00H		10 JUL 25	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	Y	N/A	RF122	CF	183.43° Mag 162.09° True	N/A	N/A	N/A	210	-	3.40	N/A	OTHER	RNAV 1 or RNP 1
20	RWY	N	N/A	MUNUG	DF	N/A	L	-5000	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	DOMDO	N/A	N/A	MUNUG	IF	N/A	N/A	-5000	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	DOMDO	N	N/A	GELUD	TF	74.44° Mag 53.15° True	N/A	-16000	N/A	N/A	N/A	14.97	N/A	OTHER	RNAV 1 or RNP 1
30	DOMDO	N	N/A	DOMDO	TF	64.00° Mag 42.80° True	N/A	N/A	N/A	N/A	N/A	39.39	N/A	OTHER	RNAV 1 or RNP 1
10	FNR	N/A	N/A	MUNUG	IF	N/A	N/A	-5000	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	FNR	N	N/A	GELUD	TF	74.44° Mag 53.15° True	N/A	-16000	N/A	N/A	N/A	14.97	N/A	OTHER	RNAV 1 or RNP 1
30	FNR	N	N/A	FNR	TF	48.27° Mag 27.07° True	N/A	N/A	N/A	N/A	N/A	273.50	N/A	OTHER	RNAV 1 or RNP 1
10	IROSI	N/A	N/A	MUNUG	IF	N/A	N/A	-5000	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	IROSI	N	N/A	RF123	TF	4.61° Mag 343.32° True	N/A	N/A	N/A	N/A	N/A	7.91	N/A	OTHER	RNAV 1 or RNP 1
30	IROSI	N	N/A	RF124	TF	0.80° Mag 339.55° True	N/A	B12000	B11000	N/A	N/A	12.49	N/A	OTHER	RNAV 1 or RNP 1
40	IROSI	N	N/A	RF071	TF	317.39° Mag 296.20° True	N/A	N/A	N/A	N/A	N/A	29.52	N/A	OTHER	RNAV 1 or RNP 1
50	IROSI	N	N/A	IROSI	TF	317.53° Mag 296.33° True	N/A	N/A	N/A	N/A	N/A	17.40	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
RF122	S 08:11:36.00W 34:54:05.00
RF123	S 07:57:45.99W 34:44:35.32
RF124	S 07:46:00.50W 34:48:59.11
RF071	S 07:32:53.83W 35:15:39.41
IROSI	S 07:25:08.21W 35:31:21.32
GELUD	S 07:56:21.82W 34:30:13.84
DOMDO	S 07:27:18.86W 34:03:17.36
VOR/DME FNR	S 03:51:24.28W 32:25:47.78
MUNUG	S 08:05:23.00W 34:42:18.00

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
18	S 08:08:20.78 W 34:55:08.34	32.31

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT