



## CODING TABLE

IAC VOR X RWY 06					SÃO LUÍS / Marechal Cunha Machado, INTL (SBSL)							SBSL_IAC_00K		09 JUL 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	FINAL	N/A	N/A	SLI	IF	N/A	N/A	N/A	+2000	N/A	N/A	N/A	N/A	IAF	N/A
20	FINAL	N/A	SLI	SLI	FC	261.47° Mag / 240.88° True	N/A	N/A	+1400	N/A	N/A	2.00 min	N/A	OTHER	N/A
30	FINAL	N/A	SLI	SLI01*	CF	53.65° Mag / 33.05° True	L	N/A	@227	N/A	N/A	N/A	N/A	FTP	N/A
10	MA	N/A	SLI	N/A	CA	53.65° Mag / 33.05° True	N/A	N/A	+1300	240	-	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	SLI	DF	N/A	L	N/A	+2000	240	-	N/A	N/A	MAHF	N/A
30	MA	N/A	SLI	SLI	HM	261.48° Mag / 240.88° True	R	N/A	+2000	240	-	1.00 min	N/A	MAHF	N/A

\*Fictitious point: Only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR/DME SLI	S 02:35:21.27W 44:14:23.89
SLI01	S 02:35:46.66W 44:14:40.32

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT