



CODING TABLE

IAC RNP Q RWY 06 (AR)					VITÓRIA / Eurico de Aguiar Salles, INTL (SBVT)							SBVT_IAC_02O		26 NOV 26	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	VT014	IF	N/A	N/A	N/A	+4000	N/A	N/A	N/A	N/A	IAF	RNP 1.0
20	APCH	N	N/A	VT008	TF	86.02° Mag 62.19° True	N/A	N/A	+3000	N/A	N/A	5.13	N/A	IF	RNP 1.0
10	APCH	N/A	N/A	VT032	IF	N/A	N/A	N/A	+4500	N/A	N/A	N/A	N/A	IAF	RNP 1.0
20	APCH	N	N/A	VT019	TF	177.62° Mag 153.79° True	N/A	N/A	+3500	N/A	N/A	3.65	N/A	OTHER	RNP 1.0
30	APCH	N	N/A	VT008	RF	N/A	L	N/A	+3000	N/A	N/A	6.30	N/A	IF	RNP 1.0
N/A	N/A	N/A	N/A	VT087*	N/A	N/A	N/A	N/A	N/A	N/A	N/A	ARC RADIUS 3.94	N/A	RF CENTER	N/A
10	FINAL	N/A	N/A	VT008	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IF	RNP 0.3
20	FINAL	N	N/A	VT047	RF	N/A	L	N/A	+2000	N/A	N/A	5.14	N/A	OTHER	RNP 0.3
N/A	N/A	N/A	N/A	VT087*	N/A	N/A	N/A	N/A	N/A	N/A	N/A	ARC RADIUS 3.94	N/A	RF CENTER	N/A
30	FINAL	N	N/A	VT046	TF	11.32° Mag 347.46° True	N/A	N/A	R1650	N/A	N/A	1.88	N/A	FAF	RNP 0.3
40	FINAL	N	N/A	VT044	RF	N/A	R	N/A	+1015	N/A	N/A	1.87	-3.20	FROP	RNP 0.15
N/A	N/A	N/A	N/A	VT022*	N/A	N/A	N/A	N/A	N/A	N/A	N/A	ARC RADIUS 2.42	N/A	RF CENTER	N/A
50	FINAL	Y	N/A	RWY06	TF	55.72° Mag 31.87° True	N/A	N/A	@63	N/A	N/A	2.80	-3.20	LTP	RNP 0.15
10	MA	N	N/A	VT094	TF	55.72° Mag 31.86° True	N/A	N/A	N/A	N/A	N/A	7.74	N/A	OTHER	RNP 1.0
20	MA	N	N/A	VT096	RF	N/A	R	N/A	N/A	220	-	10.90	N/A	OTHER	RNP 1.0
N/A	N/A	N/A	N/A	VT097*	N/A	N/A	N/A	N/A	N/A	N/A	N/A	ARC RADIUS 3.50	N/A	RF CENTER	N/A
30	MA	N	N/A	VT084	TF	234.15° Mag 210.26° True	N/A	N/A	N/A	N/A	N/A	18.53	N/A	OTHER	RNP 1.0
40	MA	N	N/A	VT014	TF	295.78° Mag 271.92° True	R	N/A	+4000	N/A	N/A	8.65	N/A	MAHF	RNP 1.0

50	MA	Y	N/A	VT014	HM	86.02° Mag 62.19° True	R	N/A	+4000	N/A	N/A	1.00 min	N/A	MAHF	RNP 1.0
----	----	---	-----	-------	----	---------------------------	---	-----	-------	-----	-----	----------	-----	------	---------

* Fictitious point: only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VT014	S 20:28:39.40W 40:25:54.00
VT008	S 20:26:15.26W 40:21:04.26
VT094	S 20:09:16.12W 40:13:07.46
VT096	S 20:12:53.51W 40:06:44.95
VT097	S 20:11:07.27W 40:09:57.78
VT084	S 20:28:57.10W 40:16:41.67
VT032	S 20:21:12.91W 40:28:30.63
VT019	S 20:24:30.29W 40:26:47.56
VT087	S 20:22:45.41W 40:23:01.79
VT047	S 20:21:53.95W 40:18:56.13
VT046	S 20:20:03.53W 40:19:22.15
VT044	S 20:18:15.56W 40:19:02.50
VT022	S 20:19:32.34W 40:16:51.50
RWY06	S 20:15:52.34 W 40:17:28.16

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT