



CODING TABLE

IAC ILS X or LOC X RWY 16L					NATAL / Campo Augusto Severo, MIL (SBNT)							SBNT_IAC_001		15 MAY 25	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	NTL	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	NTL	NTL	FC	315.80° Mag 295.09° True	R	N/A	+2200	230	-	8.02	N/A	OTHER	N/A
30	APCH	N/A	NTL	OPNAG	CF	162.49° Mag 141.78° True	N/A	N/A	+2200	N/A	N/A	N/A	N/A	IF	N/A
10	FINAL	N/A	N/A	OPNAG	IF	N/A	N/A	N/A	+2200	N/A	N/A	N/A	N/A	IF	N/A
20	FINAL	N/A	INT	EVNOP	CF	161.59° Mag 140.88° True	N/A	N/A	R1570	N/A	N/A	3.30	N/A	FAF	N/A
30	FINAL	Y	INT	RW16L	CF	161.59° Mag 140.88° True	N/A	N/A	@203	N/A	N/A	4.29	-3.00	LTP	N/A
10	MA	N/A	N/A	N/A	VA	161.59° Mag 140.89° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	NTL	DF	N/A	R	N/A	+3000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	N/A	NTL	NTL	HM	315.80° Mag 295.09° True	L	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
OPNAG	S 05:48:11.04W 35:19:53.13
EVNOP	S 05:50:46.20W 35:17:48.60
RW16L	S 05:54:06.60W 35:15:05.70
VOR/DME NTL	S 05:54:30.00W 35:14:55.20

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT