



CODING TABLE

SID EROXU 1A RWY 30					PRESIDENTE PRUDENTE / Presidente Prudente (SBDN)							SBDN_SID_00N		31 OCT 24	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	N	N/A	EROXU	CF	298.35° Mag 278.56° True	N/A	N/A	N/A	N/A	N/A	5.00	N/A	OTHER	RNAV 1 or RNP 1
10	XOLUG	N/A	N/A	EROXU	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	XOLUG	N	N/A	XOLUG	TF	350.43° Mag 330.73° True	N/A	N/A	N/A	N/A	N/A	46.45	N/A	OTHER	RNAV 1 or RNP 1
10	SINIL	N/A	N/A	EROXU	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	SINIL	N	N/A	ROKOR	TF	311.49° Mag 292.05° True	N/A	N/A	N/A	N/A	N/A	45.02	N/A	OTHER	RNAV 1 or RNP 1
30	SINIL	N	N/A	SINIL	TF	282.78° Mag 263.68° True	N/A	N/A	N/A	N/A	N/A	33.56	N/A	OTHER	RNAV 1 or RNP 1
10	NUXAL	N/A	N/A	EROXU	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	NUXAL	N	N/A	NUXAL	TF	320.91° Mag 301.43° True	N/A	N/A	N/A	N/A	N/A	47.28	N/A	OTHER	RNAV 1 or RNP 1
10	ROKOR	N/A	N/A	EROXU	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ROKOR	N	N/A	ROKOR	TF	311.49° Mag 292.05° True	N/A	N/A	N/A	N/A	N/A	45.02	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
NUXAL	S 21:45:01.75W 52:14:49.72
ROKOR	S 21:52:49.33W 52:16:18.80
XOLUG	S 21:29:02.72W 51:55:49.73
SINIL	S 21:56:35.52W 52:52:11.29
EROXU	S 22:09:40.70W 51:31:21.77

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
30	S 22:10:25.46 W 51:26:02.15	1411.52

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT