



## CODING TABLE

IAC VOR RWY 33					TEFÉ / Prefeito Orlando Marinho (SBTF)							SBTF_IAC_00E		07 SEP 23	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	TFE	IF	N/A	N/A	N/A	+2000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	TFE	TFE	FC	168.00° Mag 154.89° True	N/A	N/A	+1900	N/A	N/A	7.00	N/A	OTHER	N/A
30	APCH	N/A	TFE	SURCA	CF	316.00° Mag 302.83° True	L	N/A	R1810	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	N/A	SURCA	IF	N/A	N/A	N/A	R1810	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	TFE	TFE06*	CF	315.97° Mag 302.84° True	N/A	N/A	@218	N/A	N/A	5.00	-3.00	FTP	N/A
10	MA	N/A	TFE	N/A	CA	315.95° Mag 302.84° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	TFE	DF	N/A	R	N/A	+2000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	N/A	TFE	TFE	HM	168.01° Mag 154.89° True	R	N/A	+2000	N/A	N/A	1.00 min	N/A	MAHF	N/A

(\*) Fictitious point: Only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR TFE	S 03:23:15.97W 64:43:41.01
SURCA	S 03:26:18.75W 64:38:59.22
TFE06	S 03:23:35.26W 64:43:11.27

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT