



CODING TABLE

IAC VOR RWY 14					GOIÂNIA / Santa Genoveva, INTL (SBGO)							SBGO_IAC_00H		25 JAN 24	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	PONSA	IF	N/A	N/A	N/A	+7000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	N/A	GNV01*	AF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	N/A
30	APCH	N/A	GNV	DANRO	CF	146.11° Mag 124.88° True	N/A	N/A	+5500	N/A	N/A	0.67	N/A	IF	N/A
10	APCH	N/A	N/A	UMLIS	IF	N/A	N/A	N/A	+7000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	GNV	DANRO	CF	146.11° Mag 124.88° True	N/A	N/A	+5500	N/A	N/A	5.00	N/A	IF	N/A
10	APCH	N/A	N/A	IMBIR	IF	N/A	N/A	N/A	+7000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	N/A	GNV01*	AF	N/A	R	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	N/A
30	APCH	N/A	GNV	DANRO	CF	146.11° Mag 124.88° True	N/A	N/A	+5500	N/A	N/A	0.67	N/A	IF	N/A
10	FINAL	N/A	N/A	DANRO	IF	N/A	N/A	N/A	+5500	N/A	N/A	N/A	N/A	IF	N/A
20	FINAL	N/A	GNV	UMSAP	CF	146.11° Mag 124.88° True	N/A	N/A	R4090	N/A	N/A	5.00	N/A	FAF	N/A
30	FINAL	N/A	GNV	GNV02*	CF	146.11° Mag 124.88° True	N/A	N/A	R3133	N/A	N/A	3.00	-3.00	SDF	N/A
40	FINAL	N/A	GNV	GNV21*	CF	146.11° Mag 124.88° True	N/A	N/A	@2497	N/A	N/A	2.00	-3.00	FTP	N/A
10	MA	N/A	GNV	N/A	CA	146.12° Mag 124.89° True	N/A	N/A	+4000	180	-	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	N/A	VI	310.00° Mag 288.73° True	R	N/A	N/A	180	-	N/A	N/A	OTHER	N/A
30	MA	N/A	GNV	IMBIR	CF	271.23° Mag 250.00° True	L	N/A	+7000	N/A	N/A	N/A	N/A	MAHF	N/A
40	MA	N/A	GNV	IMBIR	HM	91.23° Mag 70.00° True	R	N/A	+7000	N/A	N/A	1.00 min	N/A	MAHF	N/A

*Fictitious point: Only for coding purposes

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR GNV	S 16:38:27.91W 49:12:40.47
DANRO	S 16:31:56.38W 49:22:20.57
UMSAP	S 16:34:48.81W 49:18:04.46
GNV02	S 16:36:32.22W 49:15:30.74
GNV21	S 16:37:41.14W 49:13:48.23
PONSA	S 16:27:38.42W 49:18:11.16
GNV01	S 16:31:33.31W 49:22:54.83
UMLIS	S 16:29:03.87W 49:26:36.54
IMBIR	S 16:42:33.93W 49:24:24.95

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT