



CODING TABLE

SID RNAV ANLOL 1A RWY 08					BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)							SBBV_SID_00V		08 AUG 24	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	Y	N/A	ANLOL	CF	78.58° Mag 62.39° True	N/A	N/A	N/A	N/A	N/A	3.00	N/A	OTHER	RNAV 1 or RNP 1
10	EDSEX	N/A	N/A	ANLOL	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	EDSEX	N	N/A	EDSEX	DF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	DIVRA	N/A	N/A	ANLOL	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	DIVRA	N	N/A	DIVRA	DF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	ILNER	N/A	N/A	ANLOL	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ILNER	N	N/A	ILNER	DF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	PICOM	N/A	N/A	ANLOL	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	PICOM	N	N/A	PICOM	DF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	ANBIX	N/A	N/A	ANLOL	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ANBIX	N	N/A	ANBIX	DF	N/A	R	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	KIGOX	N/A	N/A	ANLOL	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	KIGOX	N	N/A	KIGOX	DF	N/A	R	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
ANLLOL	N 02:52:28.80W 60:38:04.80
EDSEX	N 03:08:19.22W 61:29:24.59
DIVRA	N 03:39:38.40W 60:59:18.00
ILNER	N 03:52:16.20W 60:46:45.60
PICOM	N 03:24:33.60W 60:19:01.80
ANBIX	N 02:11:06.60W 60:37:23.40
KIGOX	N 02:16:01.80W 60:23:54.60

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
08	N 02:51:06.82 W 60:40:45.15	263.62

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE