



CODING TABLE

SID RNAV MUGIB 1B RWY 29					MANAUS / Eduardo Gomes, INTL (SBEG)							SBEG_SID_00U	26 DEC 24		
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	N/A	N/A	N/A	CA	286.55° Mag / 270.12° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	RWY	N	N/A	MUGIB	DF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
10	ANKUK	N/A	N/A	MUGIB	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ANKUK	N	N/A	ANKUK	TF	284.44° Mag / 269.26° True	N/A	N/A	N/A	N/A	N/A	95.16	N/A	OTHER	RNAV 1 or RNP 1
10	EKOXU	N/A	N/A	MUGIB	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	EKOXU	N	N/A	EKOXU	TF	232.84° Mag / 217.25° True	N/A	N/A	N/A	N/A	N/A	85.53	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
MUGIB	S 03:11:15.19W 60:42:17.39
ANKUK	S 03:12:33.00W 62:17:25.20
EKOXU	S 04:19:41.40W 61:34:03.00

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
29	S 03:02:18.84 W 60:03:42.61	251.64

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT