



CODING TABLE

IAC ILS X or LOC X RWY 16L					NATAL / Augusto Severo, MIL (SBNT)							SBNT_IAC_001		15 JUL 21	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	NTL	IF	N/A	N/A	N/A	+4000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	NTL	NTL	FC	359.63° Mag / 338.32° True	L	N/A	+2200	190	-	8.02	N/A	OTHER	N/A
30	APCH	N/A	NTL	CASTO	CF	163.09° Mag / 141.78° True	N/A	N/A	+2200	N/A	N/A	N/A	N/A	IF	N/A
10	FINAL	N/A	N/A	CASTO	IF	N/A	N/A	N/A	+2200	N/A	N/A	N/A	N/A	IF	N/A
20	FINAL	N/A	INT	NIPKA	CF	162.19° Mag / 140.88° True	N/A	N/A	R1570	N/A	N/A	3.30	N/A	FAF	N/A
30	FINAL	Y	INT	RW16L	CF	162.19° Mag / 140.88° True	N/A	N/A	@199	N/A	N/A	4.29	-3.00	LTP	N/A
10	MA	N/A	N/A	N/A	VA	162.20° Mag / 140.90° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	NTL	DF	N/A	R	N/A	+4000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	Y	NTL	NTL	HM	359.62° Mag / 338.32° True	L	N/A	+4000	N/A	N/A	1.00 min	N/A	MAHF	N/A

(*) Only for coding purpose

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
NTL	S 05:54:30.00W 35:14:55.20
CASTO	S 05:48:11.04W 35:19:53.13
NIPKA	S 05:50:46.20W 35:17:48.60
RW16L	S 05:54:06.61 W 35:15:05.70

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT