



## CODING TABLE

SID RNAV SISAV 2A RWY 31					FORTALEZA / Pinto Martins, INTL (SBFZ)							SBFZ_SID_01C		24 FEB 22	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	Y	N/A	URIVO	CF	305.97° Mag / 284.92° True	N/A	N/A	N/A	N/A	N/A	3.42	N/A	TP	RNAV 1 or RNP 1
20	RWY	N	N/A	SISAV	CF	269.99° Mag / 248.94° True	N/A	N/A	N/A	N/A	N/A	25.59	N/A	OTHER	RNAV 1 or RNP 1
10	ESAVO	N/A	N/A	SISAV	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ESAVO	N	N/A	ESAVO	CF	329.98° Mag / 308.84° True	N/A	N/A	N/A	N/A	N/A	32.62	N/A	OTHER	RNAV 1 or RNP 1
10	ABUCU	N/A	N/A	SISAV	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ABUCU	N	N/A	ABUCU	CF	212.61° Mag / 191.47° True	N/A	N/A	N/A	N/A	N/A	41.07	N/A	OTHER	RNAV 1 or RNP 1
10	GUTOI	N/A	N/A	SISAV	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	GUTOI	N	N/A	GUTOI	CF	273.85° Mag / 252.71° True	N/A	N/A	N/A	N/A	N/A	42.03	N/A	OTHER	RNAV 1 or RNP 1

SID RNAV ESAVO 2A RWY 31					FORTALEZA / Pinto Martins, INTL (SBFZ)							SBFZ_SID_01C		24 FEB 22	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	Y	N/A	URIVO	CF	305.97° Mag / 284.92° True	N/A	N/A	N/A	N/A	N/A	3.42	N/A	TP	RNAV 1 or RNP 1
20	RWY	N	N/A	ESAVO	CF	303.91° Mag / 282.86° True	N/A	N/A	N/A	N/A	N/A	50.57	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
URIVO	S 03:45:29.70W 38:36:00.26
ABUCU	S 04:35:10.20W 39:08:04.80
SISAV	S 03:54:43.80W 38:59:54.00
ESAVO	S 03:34:09.97W 39:25:18.72
GUTOI	S 04:07:16.00W 39:40:04.00

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (ft)
31	S 03:46:22.85 W 38:32:41.72	81.69

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT