



CODING TABLE

IAC VOR Z RWY 16R					NATAL / Campo Augusto Severo, MIL (SBNT)							SBNT_IAC_00M		01 DEC 22	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	NTL	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	NTL	NTL	FC	348.89° Mag / 328.09° True	N/A	N/A	+1900	200	-	8.00	N/A	OTHER	N/A
30	APCH	N/A	NTL	VAKAN	CF	148.50° Mag / 127.70° True	L	N/A	R1830	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	NTL	VAKAN	IF	N/A	N/A	N/A	R1830	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	NTL	NTL22*	CF	148.50° Mag / 127.70° True	N/A	N/A	@213	N/A	N/A	5.07	-3.00	FTP	N/A
10	MA	N/A	NTL	N/A	CA	168.00° Mag / 147.19° True	N/A	N/A	+2000	200	-	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	NTL	DF	N/A	R	N/A	N/A	200	-	N/A	N/A	OTHER	N/A
30	MA	N/A	NTL	NTL	HM	10.00° Mag / 349.19° True	L	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

(*) Fictitious point only for coding purpose

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR/DME NTL	S 05:54:30.00W 35:14:55.20
VAKAN	S 05:51:12.14W 35:19:10.85
NTL22	S 05:54:19.24W 35:15:09.10

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT