



## CODING TABLE

IAC NDB Z RWY 34					JOÃO PESSOA / Presidente Castro Pinto, INTL (SBJP)							SBJP_IAC_00F		01 DEC 22	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	FINAL	N/A	N/A	JPS	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	FINAL	N/A	JPS	JPS	FC	182.83° Mag / 161.14° True	N/A	N/A	+1700	210	-	2.67 min	N/A	IAF	N/A
30	FINAL	N/A	JPS	JPS02*	CF	344.85° Mag / 323.16° True	L	N/A	@259	N/A	N/A	N/A	N/A	FTP	N/A
10	MA	N/A	N/A	N/A	VA	344.85° Mag / 323.16° True	N/A	N/A	+2500	230	-	N/A	N/A	N/A	N/A
20	MA	N/A	N/A	JPS	DF	N/A	R	N/A	+3000	230	-	N/A	N/A	MAHF	N/A
30	MA	N/A	JPS	JPS	HM	182.83° Mag / 161.14° True	R	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

\*Fictitious point only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
JPS	S 07:08:25.80W 34:57:09.00
JPS02	S 07:09:19.62W 34:56:28.63

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT