



CODING TABLE

IAC VOR RWY 10					CRUZEIRO DO SUL / Cruzeiro do Sul, INTL (SBCZ)							SBCZ_IAC_00C	25 FEB 21		
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	CZS	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	CZS	CZS	FC	263.15° Mag 256.58° True	N/A	N/A	+2300	N/A	N/A	8.00	N/A	OTHER	N/A
30	APCH	N/A	CZS	URALI	CF	114.55° Mag 107.99° True	R	N/A	R2280	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	N/A	URALI	IF	N/A	N/A	N/A	R2280	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	CZS	CZS01*	CF	114.53° Mag 107.97° True	N/A	N/A	@683	N/A	N/A	5.00	-3.00	FTP	N/A
10	MA	N/A	N/A	N/A	VA	114.58° Mag 107.95° True	N/A	N/A	+2000	220	-	N/A	N/A	N/A	N/A
20	MA	N/A	N/A	CZS	DF	N/A	L	N/A	+3000	220	-	N/A	N/A	MAHF	N/A
30	MA	N/A	CZS	CZS	HM	263.15° Mag 256.58° True	L	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

(*) Fictitious point = for coding purpose only.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
CZS	S 07:36:24.47W 72:46:24.49
URALI	S 07:34:42.36W 72:51:40.00
CZS01	S 07:36:15.36W 72:46:52.65

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT