



CODING TABLE

IAC VOR RWY 05					MOSSORÓ / Dix-Sept Rosado (SBMS)							SBMS_IAC_00C		08 AUG 24	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	MSS	UMDAV	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	MSS	MSS02*	AF	N/A	R	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	N/A
30	APCH	N/A	MSS	KUKAT	CF	41.38° Mag 19.95° True	N/A	N/A	+1800	N/A	N/A	2.21	N/A	IF	N/A
10	APCH	N/A	MSS	DANBU	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	MSS	MSS01*	AF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	N/A
30	APCH	N/A	MSS	KUKAT	CF	41.38° Mag 19.95° True	N/A	N/A	+1800	N/A	N/A	2.21	N/A	IF	N/A
10	FINAL	N/A	MSS	KUKAT	IF	N/A	N/A	N/A	+1800	N/A	N/A	N/A	N/A	IF	N/A
20	FINAL	N/A	MSS	NEDEP	CF	41.32° Mag 19.92° True	N/A	N/A	R1730	N/A	N/A	5.00	N/A	FAF	N/A
30	FINAL	N/A	MSS	MSS05*	CF	41.29° Mag 19.92° True	N/A	N/A	@111	N/A	N/A	5.06	-3.00	FTP	N/A
10	MA	N/A	MSS	ENRIK	CF	41.29° Mag 19.92° True	N/A	N/A	+3000	N/A	N/A	15.79	N/A	MAHF	N/A
20	MA	N/A	MSS	ENRIK	HM	41.29° Mag 19.92° True	L	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

* Fictitious point: Only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
UMDAV	S 05:24:52.72W 37:21:15.04
MSS02	S 05:24:06.70W 37:26:18.36
DANBU	S 05:21:31.98W 37:30:35.99
MSS01	S 05:24:07.09W 37:26:18.50
KUKAT	S 05:22:01.96W 37:25:33.18
NEDEP	S 05:17:18.56W 37:23:50.69
MSS05	S 05:12:31.66W 37:22:06.96
ENRIK	S 04:57:40.00W 37:16:44.77

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT