



CODING TABLE

SID RNAV SIMIT 1A RWY 12					PRESIDENTE PRUDENTE / Presidente Prudente (SBDN)							SBDN_SID_00E	29 DEC 22		
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	RWY	N	N/A	ENVAP	CF	118.37° Mag 98.48° True	N/A	N/A	+2500	190	-	5.00	N/A	OTHER	RNAV 1 or RNP 1
20	RWY	N	N/A	SIMIT	TF	28.39° Mag 8.48° True	N/A	N/A	N/A	N/A	N/A	7.00	N/A	OTHER	RNAV 1 or RNP 1
10	XOLUG	N/A	N/A	SIMIT	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	XOLUG	N	N/A	XOLUG	TF	335.15° Mag 315.45° True	N/A	N/A	N/A	N/A	N/A	49.50	N/A	OTHER	RNAV 1 or RNP 1
10	NUXAL	N/A	N/A	SIMIT	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	NUXAL	N	N/A	NUXAL	TF	309.84° Mag 290.36° True	N/A	N/A	N/A	N/A	N/A	55.86	N/A	OTHER	RNAV 1 or RNP 1
10	SINIL	N/A	N/A	SIMIT	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	SINIL	N	N/A	ROKOR	TF	301.70° Mag 282.26° True	N/A	N/A	N/A	N/A	N/A	55.01	N/A	OTHER	RNAV 1 or RNP 1
30	SINIL	N	N/A	SINIL	TF	282.66° Mag 263.56S° True	N/A	N/A	N/A	N/A	N/A	33.56	N/A	OTHER	RNAV 1 or RNP 1
10	ROKOR	N/A	N/A	SIMIT	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ROKOR	N	N/A	ROKOR	TF	301.70° Mag 282.26° True	N/A	N/A	N/A	N/A	N/A	55.01	N/A	OTHER	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
ENVAP	S 22:11:19.68W 51:19:33.02
SIMIT	S 22:04:22.82W 51:18:26.28
XOLUG	S 21:29:02.72W 51:55:49.73
NUXAL	S 21:45:01.75W 52:14:49.72
ROKOR	S 21:52:49.33W 52:16:18.80
SINIL	S 21:56:35.52W 52:52:11.29

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
12	S 22:10:35.16 W 51:24:52.71	1481.43

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT