



## CODING TABLE

IAC VOR RWY 15					TEFÉ / Prefeito Orlando Marinho (SBTF)							SBTF_IAC_00D		07 SEP 23	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	TFE	IF	N/A	N/A	N/A	+2000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	TFE	TFE	FC	313.63° Mag 300.51° True	N/A	N/A	+1900	N/A	N/A	7.00	N/A	OTHER	N/A
30	APCH	N/A	TFE	UPOKA	CF	165.65° Mag 152.56° True	R	N/A	R1830	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	TFE	UPOKA	IF	N/A	N/A	N/A	R1830	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	TFE	TFE01*	CF	165.67° Mag 152.55° True	N/A	N/A	@238	N/A	N/A	5.00	-3.00	FTP	N/A
10	MA	N/A	TFE	N/A	CA	165.68° Mag 152.55° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
20	MA	N/A	N/A	TFE	DF	N/A	L	N/A	+2000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	N/A	TFE	TFE	HM	313.63° Mag 300.51° True	R	N/A	+2000	N/A	N/A	1.00 min	N/A	MAHF	N/A

(\*) Fictitious point: Only for coding purposes.

IDENT	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR TFE	S 03:23:15.97W 64:43:41.01
UPUKA	S 03:18:11.32W 64:46:18.44
TFE01	S 03:22:38.86W 64:44:00.19

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT