



CODING TABLE

IAC VOR Y RWY 16L					NATAL / Campo Augusto Severo, MIL (SBNT)							SBNT_IAC_00L		24 FEB 22	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	NTL	NTL	IF	N/A	N/A	N/A	+4000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	NTL	NTL	FC	11.85° Mag / 350.55° True	N/A	N/A	+1800	230	-	8.00	N/A	OTHER	N/A
30	APCH	N/A	NTL	LOMIL	CF	164.30° Mag / 143.00° True	L	N/A	R1790	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	N/A	LOMIL	IF	N/A	N/A	N/A	R1790	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	NTL	NTL13*	CF	164.30° Mag / 143.00° True	N/A	N/A	@199	N/A	N/A	5.00	-3.00	FTP	N/A
10	MA	N/A	NTL	N/A	CA	164.30° Mag / 143.00° True	N/A	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
20	MA	N/A	NTL	NTL	DF	N/A	R	N/A	+4000	N/A	N/A	N/A	N/A	MAHF	N/A
30	MA	N/A	NTL	NTL	HM	11.85° Mag / 350.55° True	L	N/A	+4000	N/A	N/A	N/A	N/A	MAHF	N/A

*Fictitious point: Only for coding purposes.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR NTL	S 05:54:30.00W 35:14:55.20
LOMIL	S 05:50:09.38W 35:18:11.30
NTL13*	S 05:54:10.11W 35:15:10.17

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT