

**INSTRUMENT APPROACH
CHART (IAC)**

TEFÉ / Tefé (SBTF)



AD ELEV: 186'

NDB RWY 33

ATIS NIL	APP NIL	AFIS TEFÉ 125.60	GNDC NIL
NDB TFE 300 KHz	FINAL CRS 342°	N/A	NDB MDA / (OCH): 780' / (620')

APCH Perdida: Subir para **2000'** no QDR **342** do NDB TFE. Após, curvar à DIREITA direto NDB TFE para espera.
Missed APCH: Climb to **2000'** on **342** QDR TFE NDB. After, turn RIGHT direct to TFE NDB for holding.

RMK: NIL.

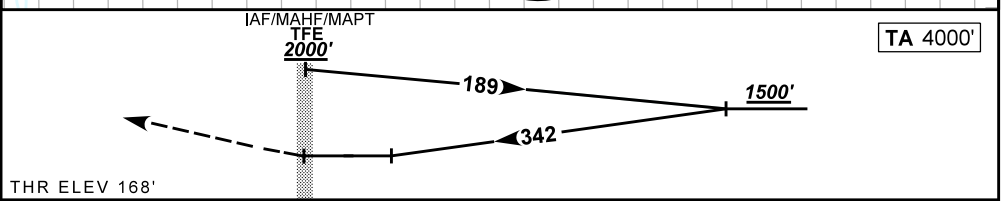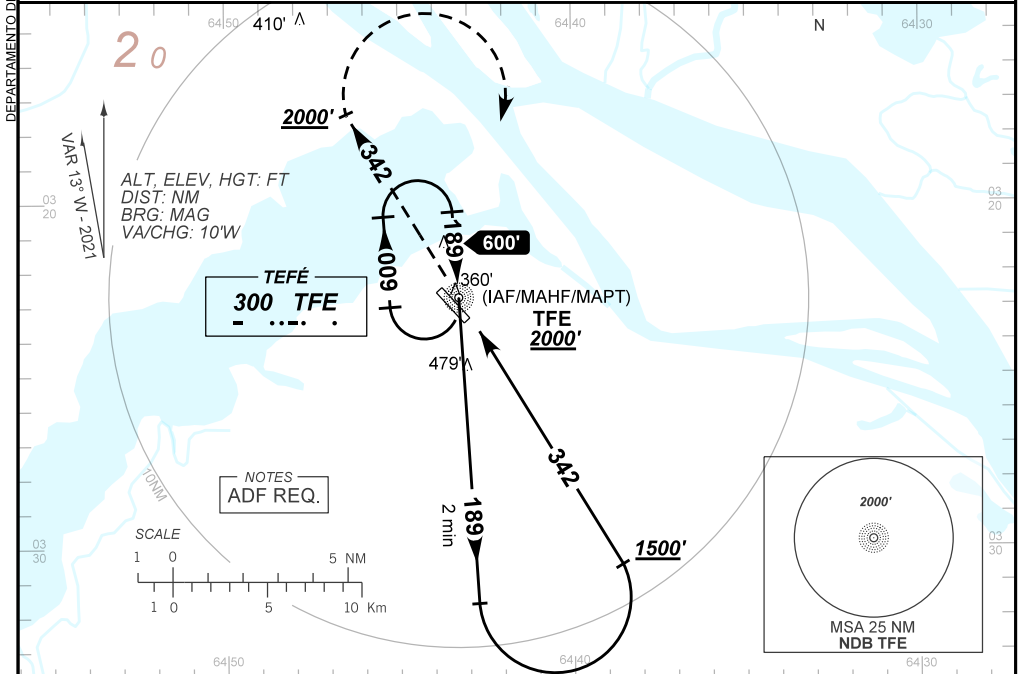

RWY33	NIL	KT	090	110	130	160	170	190
ALT	NIL	FPM	630			NA		
(HGT)	NIL	FAF-MAPT	NA					
STRAIGHT-IN	CAT	A	B	C	D	E		
NDB	MDA / (OCH)	780' / (620')				NA		
	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL		NIL / 2800 / NIL				
CIRCLING	MDA / (OCH)	NA						
	VIS (m)							

CHANGES: LAYOUT, MDA, PROC, TA, THEL.