

**INSTRUMENT APPROACH
CHART (IAC)**

ALTAMIRA / Altamira (SBHT)

AD ELEV: 368'



NDB RWY 25

ATIS NIL	APP NIL	AFIS ALTAMIRA 125.85	GNDC NIL
-------------	------------	-------------------------	-------------

NDB ATM 295 KHz	FINAL CRS 239°	N/A	N/A	NDB MDA / (OCH): 1080' / (730')
--------------------	-------------------	-----	-----	------------------------------------

APCH Perdida: Subir para **3000'**. Manter QDR **239** do NDB ATM até **2500'**. Após, curvar à DIREITA direto NDB ATM para espera.
Missed APCH: Climb to **3000'**. Maintain **239** QDR ATM NDB until **2500'**. After, turn RIGHT direct to ATM NDB for holding.

RMK: NIL.

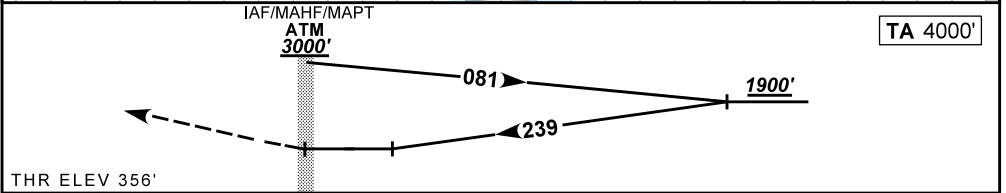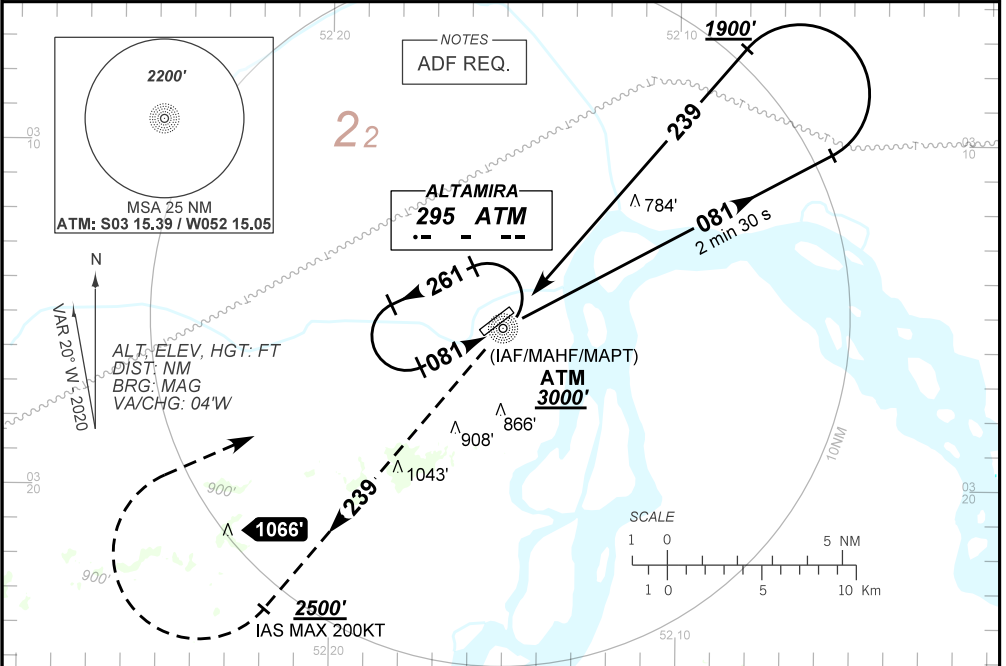

RWY25	NIL	KT	090	110	130	160	170	190
ALT	NIL	FPM	600			NA		
(HGT)	NIL	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
NDB	MDA / (OCH)	1080' / (730')			NA	
	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL		NIL / 3400 / NIL		
CIRCLING	MDA / (OCH)	NA				
	VIS (m)					

CHANGES: LAYOUT, MDA, PROC, TA, THEL, VIS.