

**INSTRUMENT APPROACH  
CHART (IAC)**



**SANTARÉM / Maestro Wilson Fonseca, INTL (SBSN)**

**AD ELEV: 197'**

**ILS Y RWY 10**

<b>ATIS</b> NIL	<b>APP SANTARÉM</b> 119.30	<b>TWR SANTARÉM</b> 118.10	<b>GNDC</b> NIL
<b>LOC ISR</b> 110.90 MHz	<b>FINAL CRS</b> 099°	<b>FAF:</b> 1870'	<b>CAT I</b> DA / (OCH): 365' / (200')

APCH Perdida: Subir para **3000'**. Após **1000'**, curvar à ESQUERDA direto SN363 para espera.  
Missed APCH: Climb to **3000'**. After **1000'**, turn LEFT direct SN363 for holding.

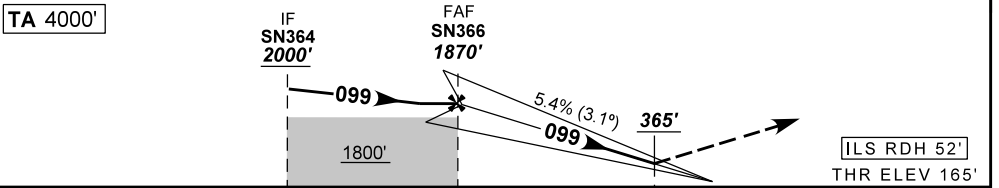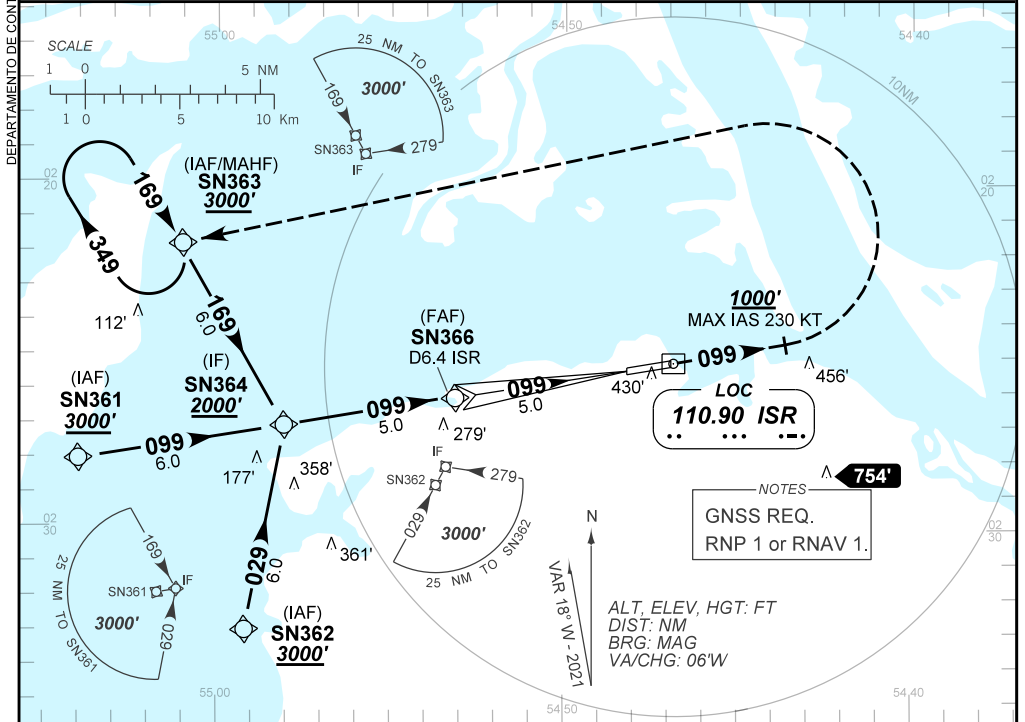

TO THR 10 (NM)	10.0	5.0	0.5	0.0
TO ISR (DME)	11.4	6.4	1.9	1.4

SN366	4.0	3.0	2.0	1.0	0.5	RWY10	KT	090	110	130	150	170	190
1870	1533	1204	875	546	365	ALT	FPM	500	600	750	850	950	NA
1705	1368	1039	710	381	200	(HGT)	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	365' / (200')				NA
CAT I	ALS/NO ALS/ RVR ALS (m)	NIL / 1200 / NIL				NA
	MDA / (OCH) / TETO	NA				
CIRCLING	VIS (m)	NA				

CHANGES: DIST. TA.