

**INSTRUMENT APPROACH
CHART (IAC)**

TAUBATÉ / Base de Aviação de Taubaté, MIL (SBTA)

VOR RWY 08



AD ELEV: 1902'

ATIS NIL	APP NIL	TWR PIONEIRO 118.85	TWR TAUBATÉ 119.90	GND C TAUBATÉ 121.70
VOR TAU 112.60 MHz	FINAL CRS 072°	FAF: 3410'	N/A	VOR MDA / (OCH): 2540' / (640')

APCH Perdida: Subir para **6000'**. Manter RDL **072** do VOR TAU até **4000'**. Após, curvar à ESQUERDA direto para VOR TAU para espera.

Missed APCH: Climb to **6000'**. Maintain **072** RDL TAU VOR until **4000'**. After, turn LEFT direct to TAU VOR for holding.

RMK: NIL.

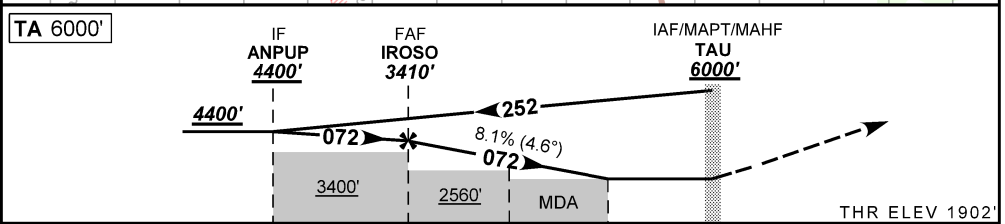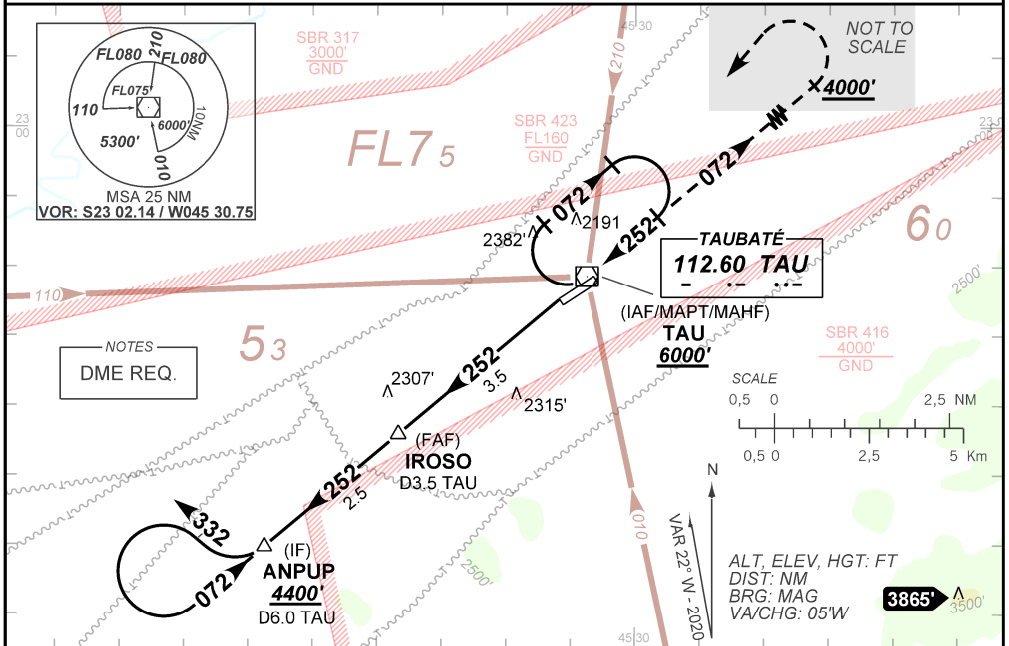

TO THR 08 (NM)	5.5	3.0	1.5	1.2	0.0	THR ELEV 1902'
TO TAU (DME)	6.0	3.5	2.0	1.7	0.5	

	IROSO	2.0	1.5	1.2	RWY08	KT	060	070	080	090
	3410	2940	2675	2540	ALT	FPM	490	570	650	730
	1508	1038	773	640	(HGT)	FAF-MAPT	NA			

STRAIGHT-IN	CAT	H
	MDA / (OCH)	2540' / (640')
VOR	ALS/NO ALS/ RVR ALS (m)	NIL / 800 / NIL
CIRCLING	MDA / (OCH)	NA
	VIS (m)	

CHANGES: EAC. FREQ.