

**INSTRUMENT APPROACH  
CHART (IAC)**

**TAUBATÉ / Base de Aviação de Taubaté, MIL (SBTA)**

**VOR RWY 26**

**AD ELEV: 1902'**



ATIS NIL	APP NIL	TWR PIONEIRO 118.85	TWR TAUBATÉ 119.90	GNDC TAUBATÉ 121.70
-------------	------------	------------------------	-----------------------	------------------------

VOR TAU 112.60 MHz	FINAL CRS 271°	FAF: 3190'	N/A	VOR MDA / (OCH): 2450' / (570')
-----------------------	-------------------	---------------	-----	------------------------------------

APCH Perdida: Subir para 6000'. Manter RDL 271 do VOR TAU até 3000'. Após, curvar à DIREITA para interceptar a RDL 051 do VOR TAU até DILUD para espera.

Missed APCH: Climb to 6000'. Maintain 271 RDL TAU VOR until 3000'. After, turn RIGHT to intercept 051 RDL TAU VOR to DILUD for holding.

RMK: NIL.

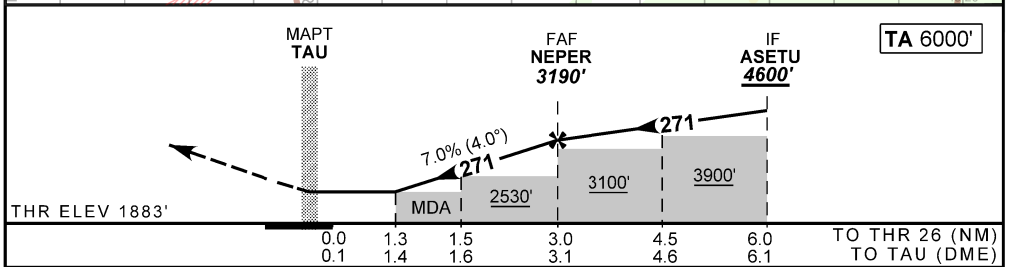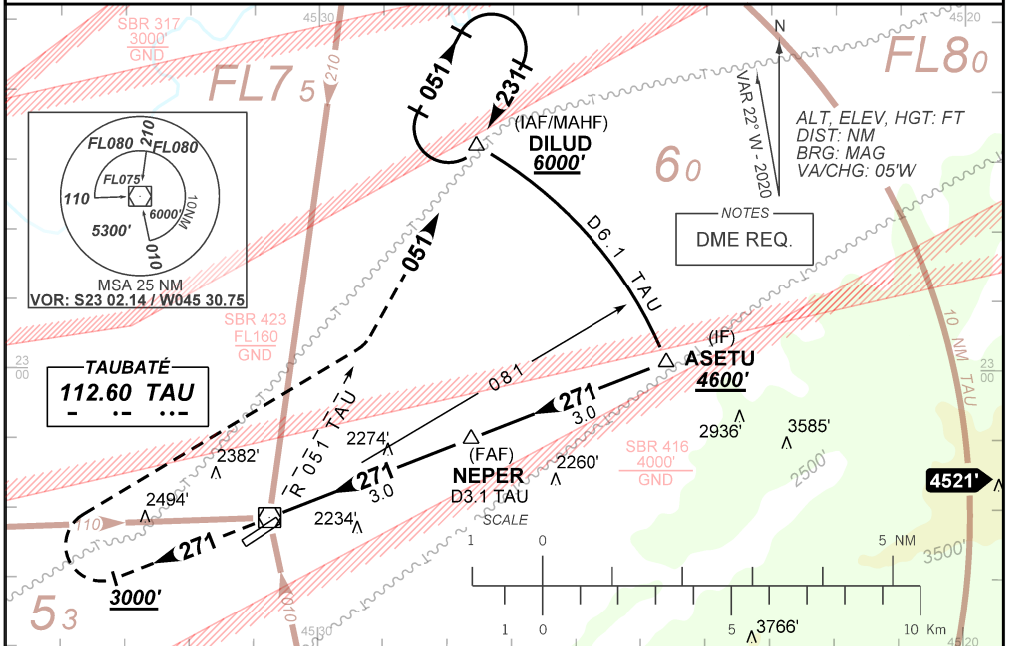

RWY26	1.3	1.5	2.0	NEPER		KT	060	070	080	090
ALT	2450	2558	2771	3190		FPM	430	500	600	640
(HGT)	570	675	888	1307		FAF-MAPT			NA	

STRAIGHT-IN	CAT	H
	MDA / (OCH)	2450' / (570')
VOR	ALS/NO ALS/ RVR ALS (m)	NIL / 800 / NIL
CIRCLING	MDA / (OCH)	NA
	VIS (m)	

CHANGES: EAC. FREQ.