

INSTRUMENT APPROACH
CHART (IAC)

AD ELEV: 636'



CRUZEIRO DO SUL / Cruzeiro do Sul, INTL (SBCZ)

RNP X RWY 28

ATIS NIL	APP NIL	AFIS CRUZEIRO 125.70	GNDC NIL
TEMP LNAV/VNAV MIN 0°C / MAX 50°C	FINAL CRS 281°	FAF: 2280'	LNAV DA / (OCH): 978' / (342')
			MDA / (OCH): 1120' / (490')

APCH Perdida: Subir para **3000'**. Manter proa **280** até **2000'**. Após, curvar à DIREITA direto CZ008 para espera.

Missed APCH: Climb to **3000'**. Maintain heading **280** until **2000'**. After, turn RIGHT direct CZ008 for holding.

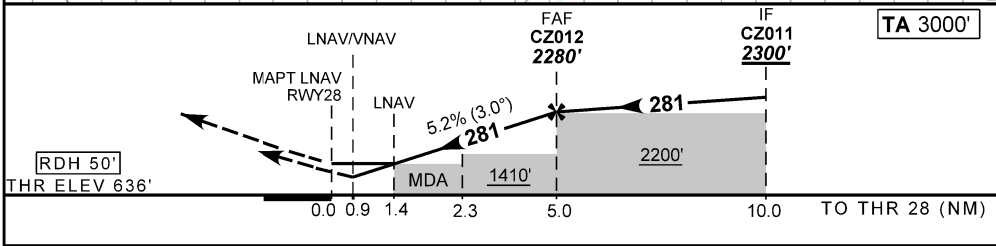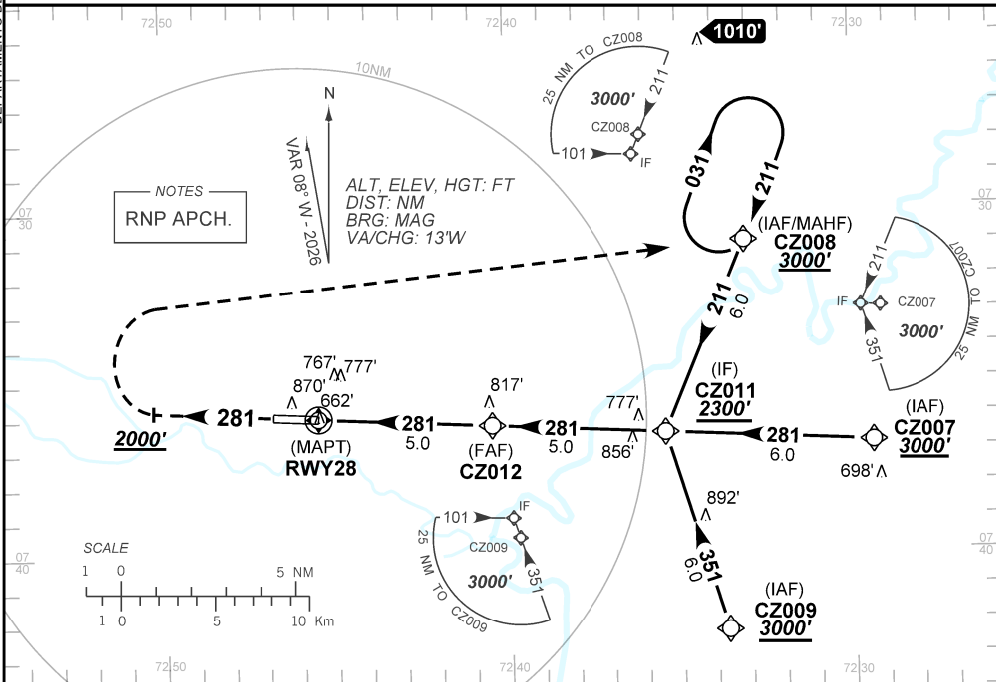

RWY28	1.4	2.0	2.3	3.0	4.0	CZ012	KT	090	110	130	150	170	190	
ALT	1120	1323	1418	1641	1960	2280	FPM	500	600	700	800	900	NA	
(HGT)	490	687	782	1005	1324	1644	FAF-MAPT	NA						
STRAIGHT-IN	CAT			A		B		C			D		E	
LNAV/VNAV	DA / (OCH)			978' / (342')								NA		
	ALS/NO ALS/ RVR ALS (m)			NIL / 1600 / NIL										
LNAV	MDA / (OCH)			1120' / (490')										
	ALS/NO ALS/ RVR ALS (m)			NIL / 1600 / NIL				NIL / 2300 / NIL						
CIRCLING	MDA / (OCH)			NA										
	VIS (m)													