

**INSTRUMENT APPROACH
CHART (IAC)**

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)



VOR Y RWY 26

AD ELEV: 276'

D-ATIS NIL	APP BOA VISTA 120.10		TWR BOA VISTA 118.10	GNDX BOA VISTA NIL
VOR BVI 113.10 MHz	FINAL CRS 270°	FAF: 1780'	N/A	VOR MDA / (OCH): 750' / (490')

APCH Perdida: Subir para **4000'**. Manter a RDL **270** VOR BVI até cruzar **1500'**. Curvar à DIREITA, proa **089** para interceptar a RDL **050** VOR BVI até NENEN para espera.
Missed APCH: Climb to **4000'**. Maintain RDL **270** BVI VOR until passing **1500'**. Turn RIGHT, heading **089** to intercept RDL **050** BVI VOR until NENEN for holding.

DEPARTAMENTO DE CONTROLE DO ESPAÇO AEREO

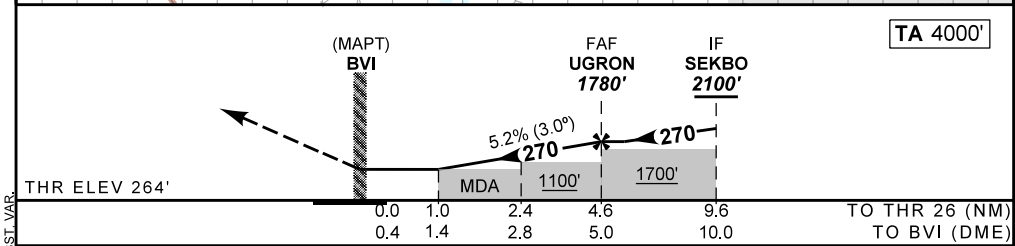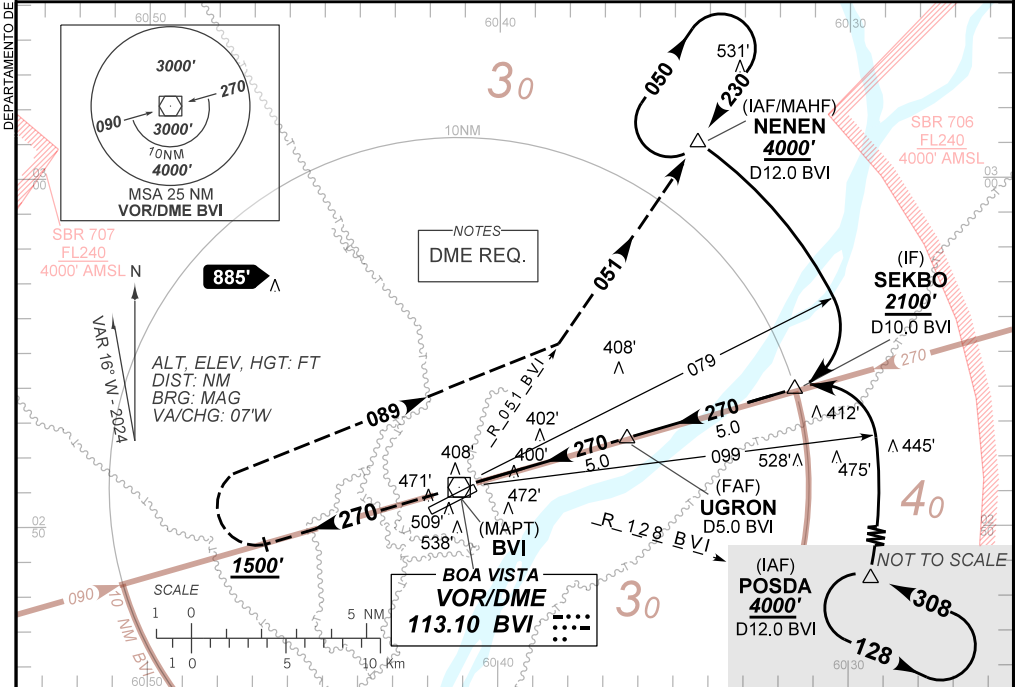

RWY26	1.0	2.4	3.0	4.0	UGRON	Ground Speed (KT)	090	110	130	150	170	190
ALT	750	1140	1364	1630	1780	FPM	500	600	700	800	900	1000
(HGT)	490	876	1100	1366	1516	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
	MDA / (OCH)	750' / (490')				
VOR	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL		NIL / 2300 / NIL		
	MDA / (OCH)	NA				
CIRCLING	MDA / (OCH)	NA				
	VIS (m)	NA				