

**INSTRUMENT APPROACH  
CHART (IAC)**

**BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)**

**ILS W RWY 08**



**AD ELEV: 276'**

D-ATIS <b>NIL</b>	APP BOA VISTA <b>120.10</b>	TWR BOA VISTA <b>118.10</b>	GND C <b>NIL</b>
ILS/DME IBV <b>109.30 MHz</b>	FINAL CRS <b>079°</b>	FAF: <b>1910'</b>	CAT I <b>DA / (OCH): REFER TO MNM</b>

APCH Perdida: Subir para **4000'**. Manter rumo **079°** até **1500'**. Após, curvar à ESQUERDA direto BV007 para espera.

Missed APCH: Climb to **4000'**. Maintain course **079°** until **1500'**. After, turn LEFT direct BV007 for holding.

DEPARTAMENTO DE CONTROLE DO ESPAÇO AÉREO

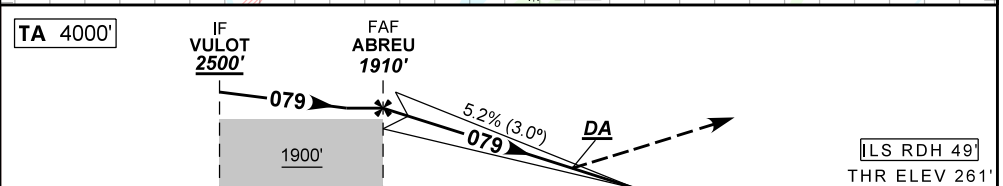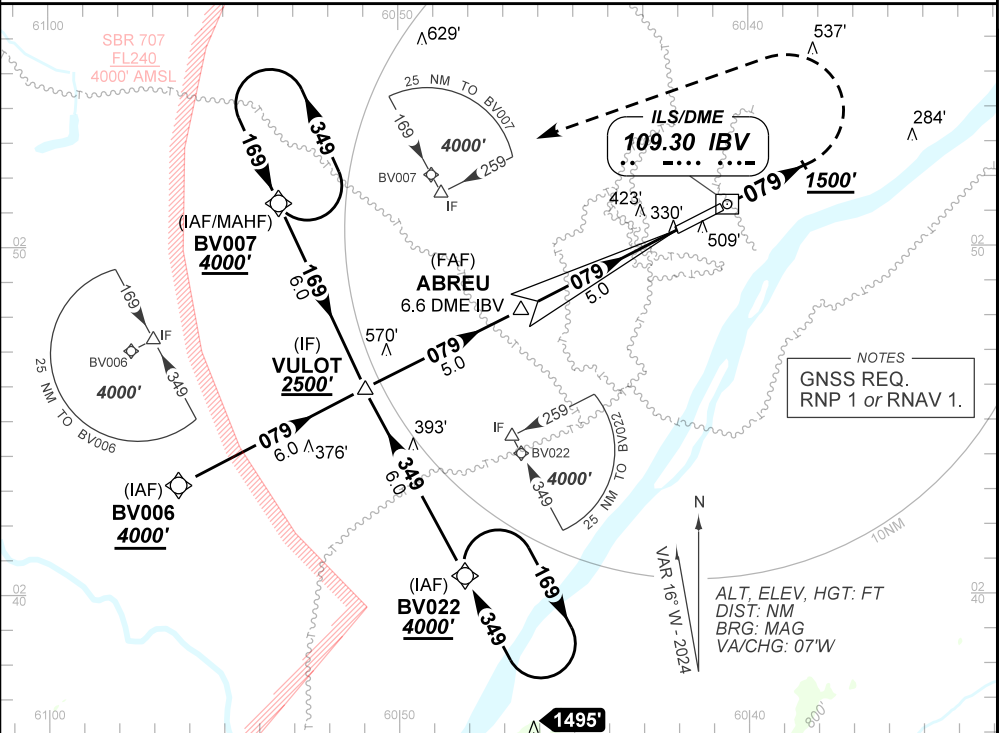

TO THR 08 (NM)	10.0	5.0	0.0
TO IBV (DME)	11.6	6.6	1.6

NIL	RWY08	090	110	130	150	170	190
	ALT	500	600	700	800	900	1000
	(HGT)	NIL					

STRAIGHT-IN	CAT	A	B	C	D	E
CAT I	DA / (OCH)	511' / (250')				612' / (351')
	ALS/NO ALS / RVR ALS (m)	NIL / 1200 / NIL				NIL / 1600 / NIL
CIRCLING	MDA / (OCH)	NA				
	VIS (m)					

CHANGES: OBST. PROC. VAR.