

**INSTRUMENT APPROACH  
CHART (IAC)**

**BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)**

**AD ELEV: 276'**



**VOR X RWY 08**

D-ATIS <b>NIL</b>	APP BOA VISTA <b>120.10</b>	TWR BOA VISTA <b>118.10</b>	GNDX BOA VISTA <b>NIL</b>
----------------------	--------------------------------	--------------------------------	------------------------------

VOR BVI <b>113.10 MHz</b>	FINAL CRS <b>072°</b>	FAF: <b>1570'</b>	N/A	VOR MDA / (OCH): <b>760' / (500')</b>
------------------------------	--------------------------	----------------------	-----	--

APCH Perdida: Subir para **3000'**. Manter a RDL **072** do VOR BVI até **1500'**. Após, curvar à ESQUERDA direto VOR BVI para espera.

Missed APCH: Climb to **3000'**. Maintain RDL **072** BVI VOR until **1500'**. Then, turn LEFT direct BVI VOR for holding.

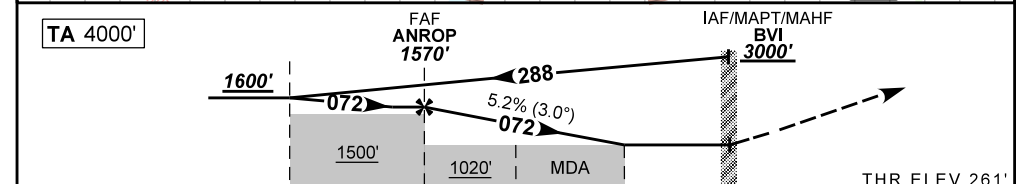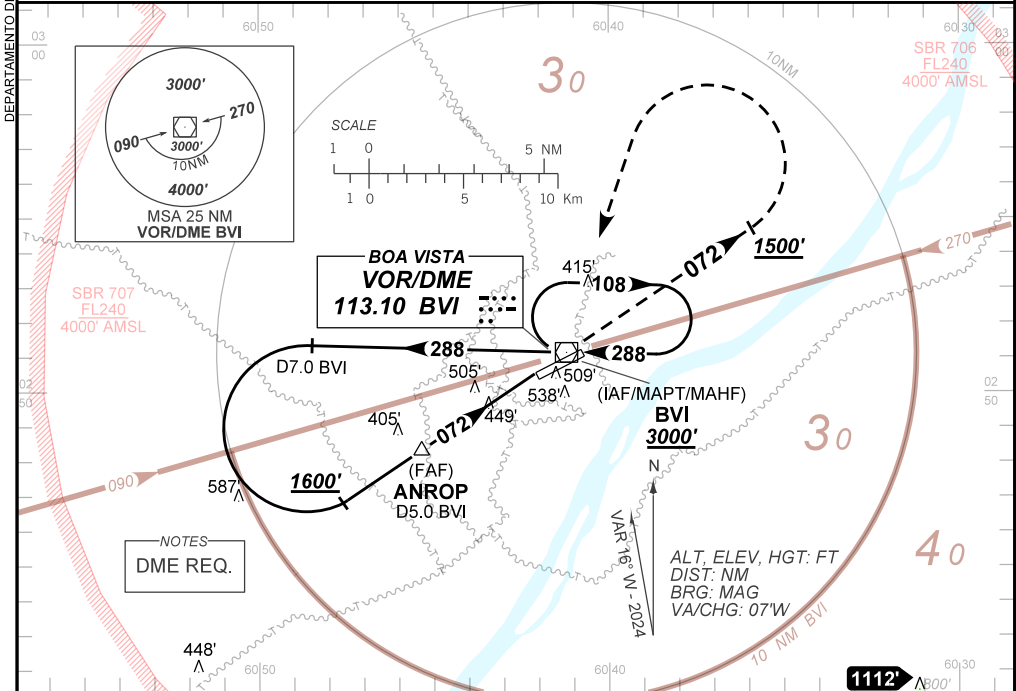

TO THR 08 (NM)	5.9	3.9	2.2	1.4	0.0
TO BVI (DME)	7.0	5.0	3.3	2.5	1.1

	ANROP	3.0	2.2	1.4	RWY08	Ground Speed (KT)	090	110	130	150	170	190
	1570	1266	1020	760	ALT	FPM	500	600	700	800	900	1000
	1309	1005	759	500	(HGT)	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
VOR	MDA / (OCH)	760' / (500')				
	ALS/NO ALS/ RVR ALS (m)	800 / 1600 / 700		1500 / 2300 / 1400		
CIRCLING	MDA / (OCH)	NA				
	VIS (m)					