

**INSTRUMENT APPROACH
CHART (IAC)**



BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)

AD ELEV: 276'

RNP Y RWY 26

D-ATIS 127.60	APP BOA VISTA 119.35 120.10	TWR BOA VISTA 118.10 118.30	GNDCL BOA VISTA NIL
TEMP LNAV/VNAV MIN 0°C / MAX 50°C	FINAL CRS 259°	FAF: 1910'	LNAV/VNAV DA / (OCH): 603' / (339')
			LNAV MDA / (OCH): 680' / (420')

APCH Perdida: Subir para **4400'**. Manter proa **259** até **1500'**. Após, curvar à DIREITA direto BV023 para espera.
Missed APCH: Climb to **4400'**. Maintain heading **259** until **1500'**. After, turn RIGHT direct BV023 for holding.

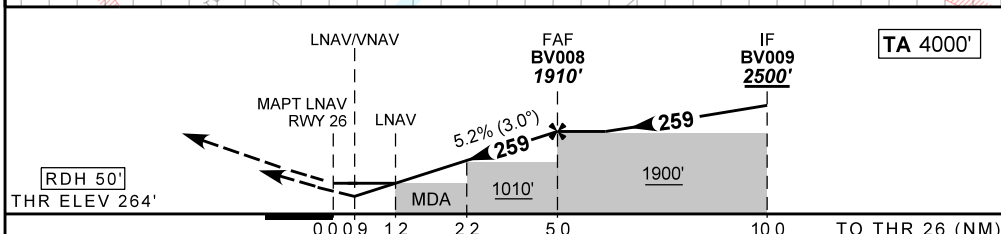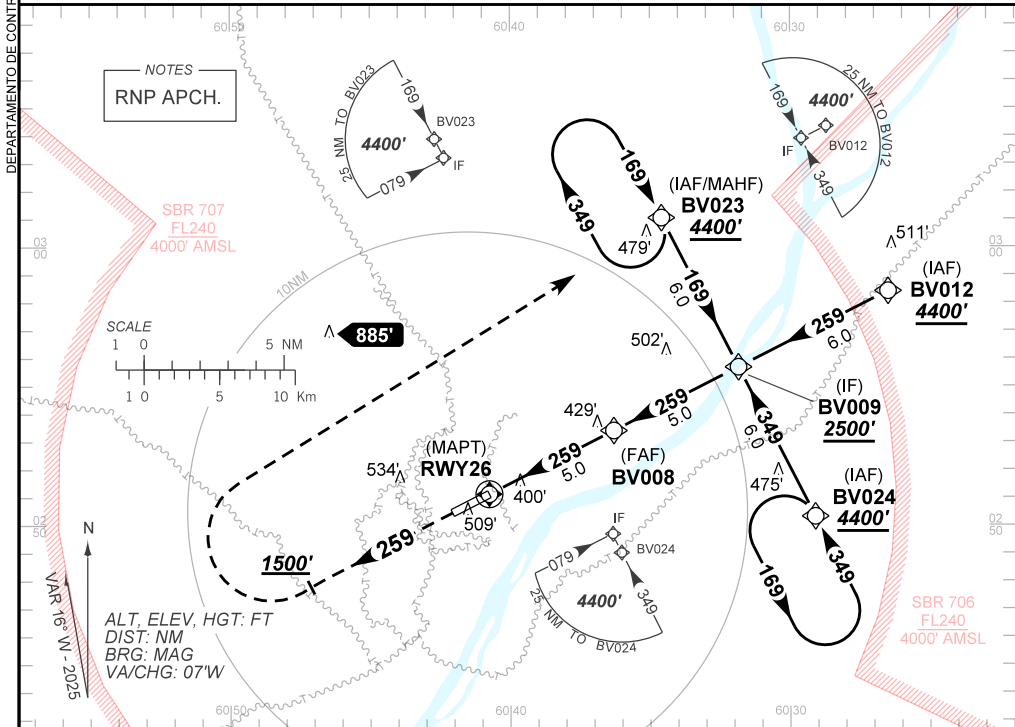

RWY26	1.2	2.2	3.0	4.0	BV008		Ground Speed (KT)	090	110	130	150	170	190
ALT	680	1020	1269	1588	1910		FPM	500	600	700	800	900	1000
(HGT)	420	756	1005	1324	1646		FAF-MAPT			NA			

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	603' / (339')				NA
LNAV/VNAV	ALS/NO ALS/ RVR ALS (m)	NIL / 1500 / NIL				NA
	MDA / (OCH)	680' / (420')				
LNAV	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL		NIL / 1900 / NIL		
	MDA / (OCH)	NIL				
CIRCLING	VIS (m)	NA				

CHANGES: FREC.