

**INSTRUMENT APPROACH
CHART (IAC)**

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)

ILS W RWY 08



AD ELEV: 276'

D-ATIS 127.60	APP BOA VISTA 119.35 120.10	TWR BOA VISTA 118.10 118.30	GND C NIL
ILS/DME IBV 109.30 MHz	FINAL CRS 079°	FAF: 1910'	CAT I DA / (OCH): REFER TO MNM

APCH Perdida: Subir para **4000'**. Manter rumo **079°** até **1500'**. Após, curvar à ESQUERDA direto BV007 para espera.

Missed APCH: Climb to **4000'**. Maintain course **079°** until **1500'**. After, turn LEFT direct BV007 for holding.

DEPARTAMENTO DE CONTROLE DO ESPAÇO AÉREO

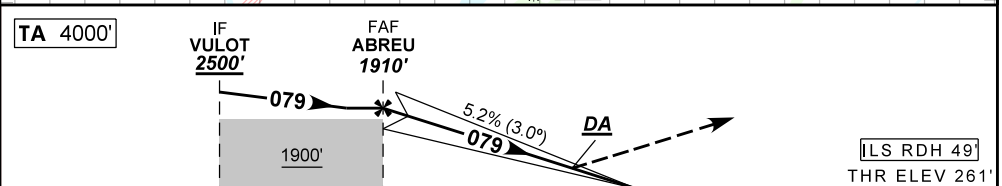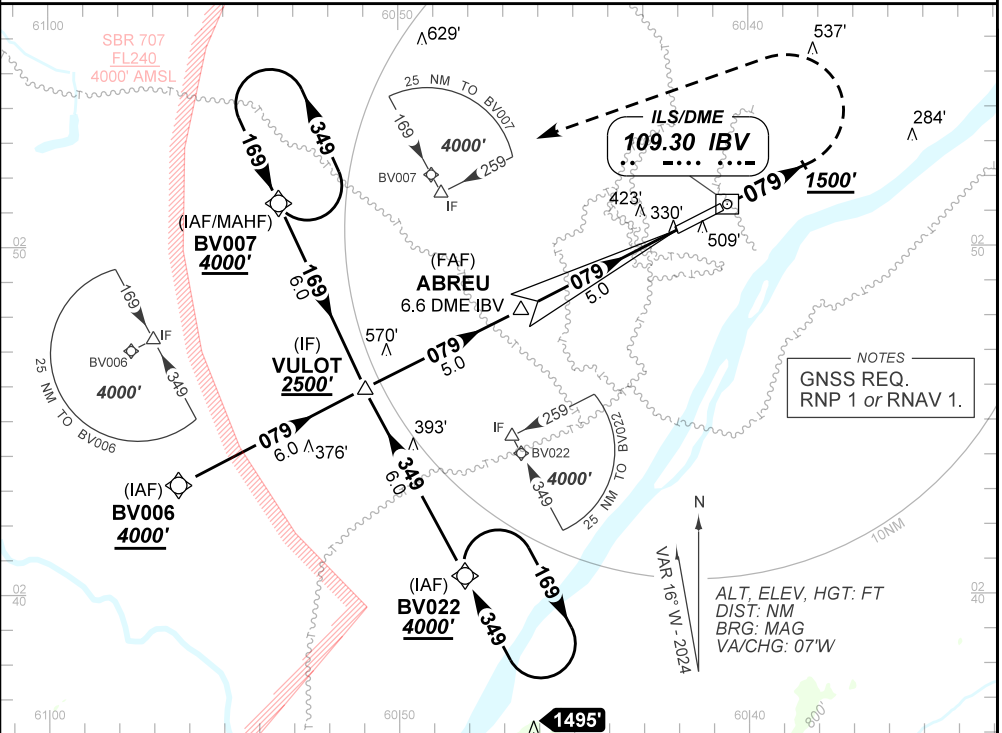

TO THR 08 (NM)	10.0	5.0	0.0
TO IBV (DME)	11.6	6.6	1.6

NIL	RWY08	Ground Speed (KT)	090	110	130	150	170	190
		FPM	500	600	700	800	900	1000
		FAF-MAPT	NIL					

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	511' / (250')				612' / (351')
	ALS/NO ALS/ RVR ALS (m)	NIL / 1300 / NIL				NIL / 1600 / NIL
CIRCLING	MDA / (OCH)	NA				
	VIS (m)					

CHANGES: FREQ. VIS.