

INSTRUMENT APPROACH
CHART (IAC)

ARAÇATUBA / Araçatuba (SBAU)



RNP RWY 05

AD ELEV: 1362'

ATIS NIL	APP NIL	AFIS ARAÇATUBA 130.60	GNDC NIL
TEMP LNAV/VNAV MIN 0°C / MAX 50°C	FINAL CRS 049°	FAF: 3010'	LNAV/VNAV DA / (OCH): 1612' / (250')
			LNAV MDA / (OCH): 1750' / (390')

APCH Perdida: Subir para **5000'**. Manter rumo **049** até **2000'**. Após, curvar a ESQUERDA direto para AU003 para espera.

Missed APCH: Climb to **5000'**. Maintain course **049** until **2000'**. After, turn LEFT direct to AU003 for holding.

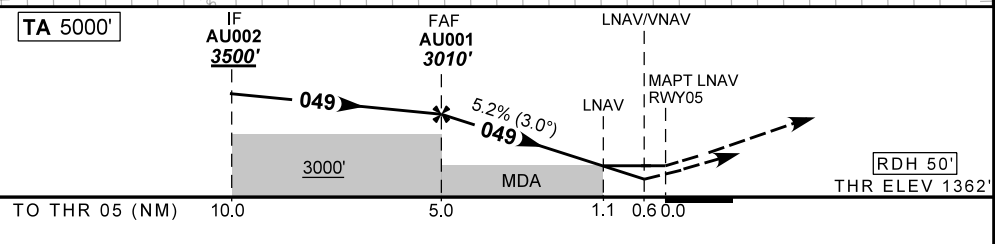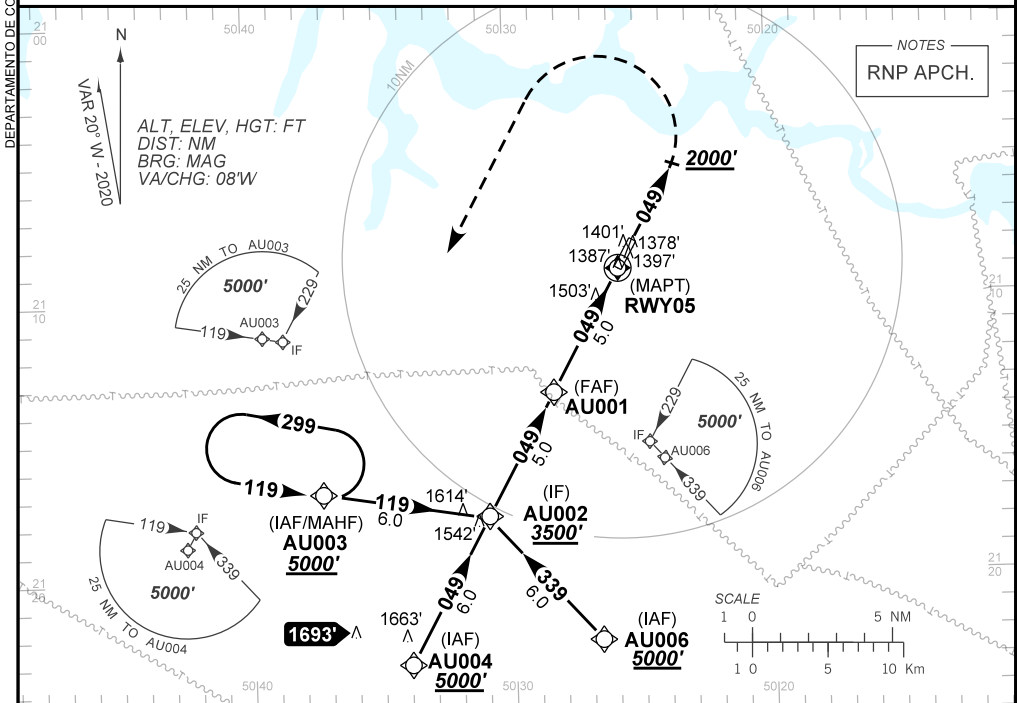

	AU001	4.0	3.0	2.0	1.1	RWY05	Ground Speed (KT)	090	110	130	150	170	190
	3010	2686	2367	2049	1750	ALT	FPM	500	600	700	800	900	NA
	1648	1324	1005	687	390	(HGT)	FAF-MAPT						NA

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)		1612' / (250')			
LNAV/VNAV	ALS/NO ALS/ RVR ALS (m)		NIL / 1300 / NIL			NA
	MDA / (OCH)		1750' / (390')			
LNAV	ALS/NO ALS/ RVR ALS (m)		NIL / 1600 / NIL		NIL / 1800 / NIL	
	MDA / (OCH)					
CIRCLING	MDA / (OCH)					NA
	VIS (m)					

CHANGES: LAYOUT.