

**INSTRUMENT APPROACH  
CHART (IAC)**

**BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)**

**AD ELEV: 276'**



**RNP Z RWY 08**

DEPARTAMENTO DE CONTROLE DO ESPAÇO AÉREO

D-ATIS <b>NIL</b>	APP BOA VISTA <b>120.10</b>	TWR BOA VISTA <b>118.10</b>	GNDC <b>NIL</b>
TEMP LNAV/VNAV <b>MIN 00°C / MAX 50°C</b>	FINAL CRS <b>079°</b>	FAF: <b>1910'</b>	LNAV/VNAV DA / (OCH): <b>644' / (383')</b>
			LNAV MDA / (OCH): <b>700' / (440')</b>

APCH Perdida: Subir para **4000'**. Manter rumo **079°** até **1500'**. Então, curvar à ESQUERDA direto BV003 para espera.

Missed APCH: Climb to **4000'**. Maintain course **079°** until **1500'**. Then, turn LEFT direct BV003 for holding.

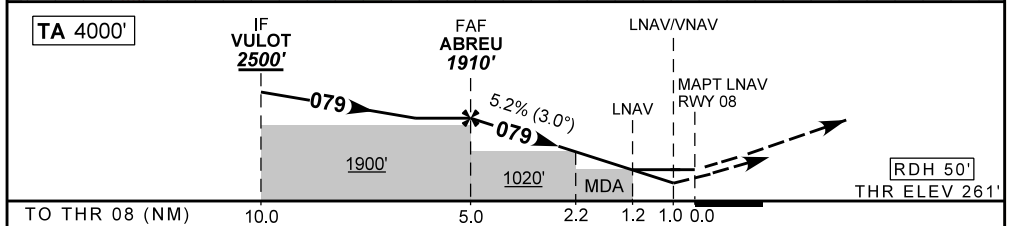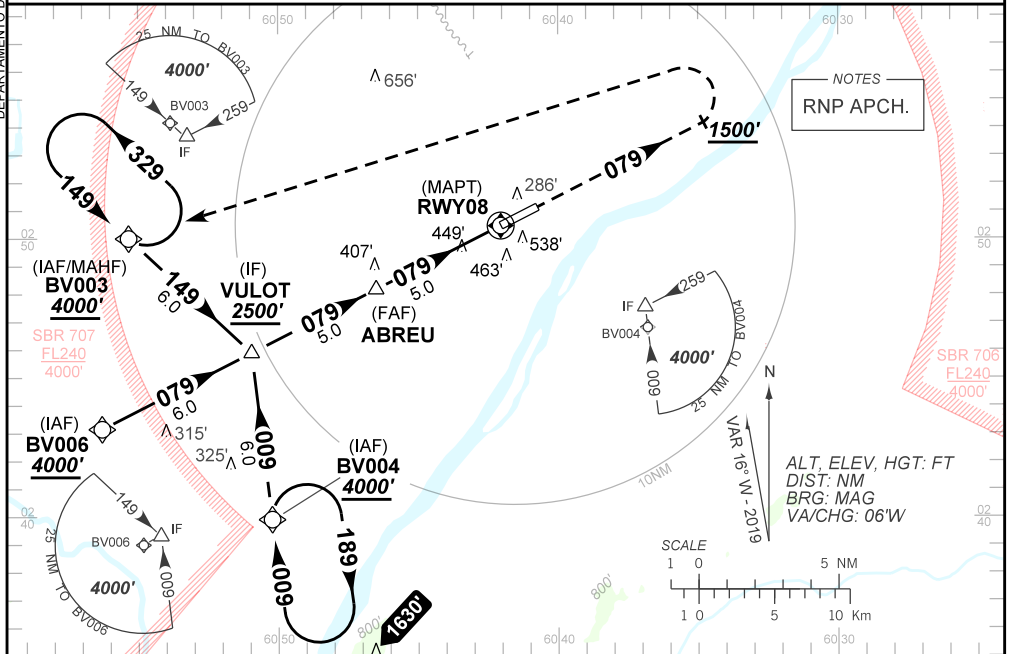

	ABREU	4.0	3.0	2.2	1.2	RWY08	Ground Speed (KT)	090	110	130	150	170	190
	1910	1585	1266	1020	700	ALT	FPM	500	600	700	800	900	1000
	1649	1324	1005	759	440	(HGT)	FAF-MAPT	NA					

CHANGES: IDENT, LAYOUT.

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	644' / (383')				NA
LNAV/VNAV	ALS/NO ALS/ RVR ALS (m)	1100 / 1800 / 1000				NA
	MDA / (OCH)	700' / (440')				
LNAV	ALS/NO ALS/RVR ALS (m)	1100 / 1800 / 1000		1300 / 2000 / 1100		
	MDA / (OCH)					
CIRCLING	MDA / (OCH)					
	VIS (m)	NA				